



#### Stage 4

Insert the central articulated joint locking pin (located on the right-hand side of the joint). Then stop the engine and disconnect key.



#### Stage 5

Turn the rear view mirrors inwards and make sure that the two doors and the rear cab window are closed.

#### Stage 6

Use chocks and chains to immobilise the vehicle and equipment on the trailer.

#### Stage 7

You should be aware of maximum headroom: measure the distance separating the ground from the highest loader part.

## LIFT

#### Stage 1

Lower the loader bucket onto the ground and lock the loader controls inside the driver's cab by using the lock pin.

#### Stage 2

Insert the central articulated joint locking pin. Then stop the engine and disconnect key.



#### Stage 3

Use the 4 points indicated (2 front and 2 rear) with the appropriate stickers to lift the machine.



Observe the machine user standards described in this chapter, any other use must be considered forbidden unless you have prior authorisation from the manufacturer.

GB