


RATING PLATES AND ADHESIVE STICKERS FOR INFORMATION AND WARNING

The rating plates and adhesive stickers on the vehicle provide information or warnings in the form of texts or drawings that the operator must learn and respect. Whenever they are no longer legible, damaged, or covered by paint, they must be replaced. The code number is indicated on the respective rating plate/adhesive sticker or in the Spare Parts Catalogue.

1. Loader controls
2. Wear helmet
3. Fasten seat belt
4. Read Manual before operating
5. Warning: for towing the vehicle
6. Safety rod on lifting cylinder
7. Reflective film
8. Keep out of moving arm radius
9. Do not lift
10. Lifting point
11. Warning! Battery acid
12. Do not lift
13. Do not tread
14. Warning! various warnings
15. Do not open when engine is running.
16. Acoustic power LwA 103
17. Acoustic power LpA 74
18. Fire Extinguisher
19. First Aid Box
20. Safety Exit
21. Contains antifreeze
22. Danger! Articulated joint
23. Diesel
24. To close the door.....
25. Hydraulic oil
26. Stop
27. CE
28. Burns may occur.
29. Brake oil tank
30. Centralised pressure taps
31. Warning! fan activated

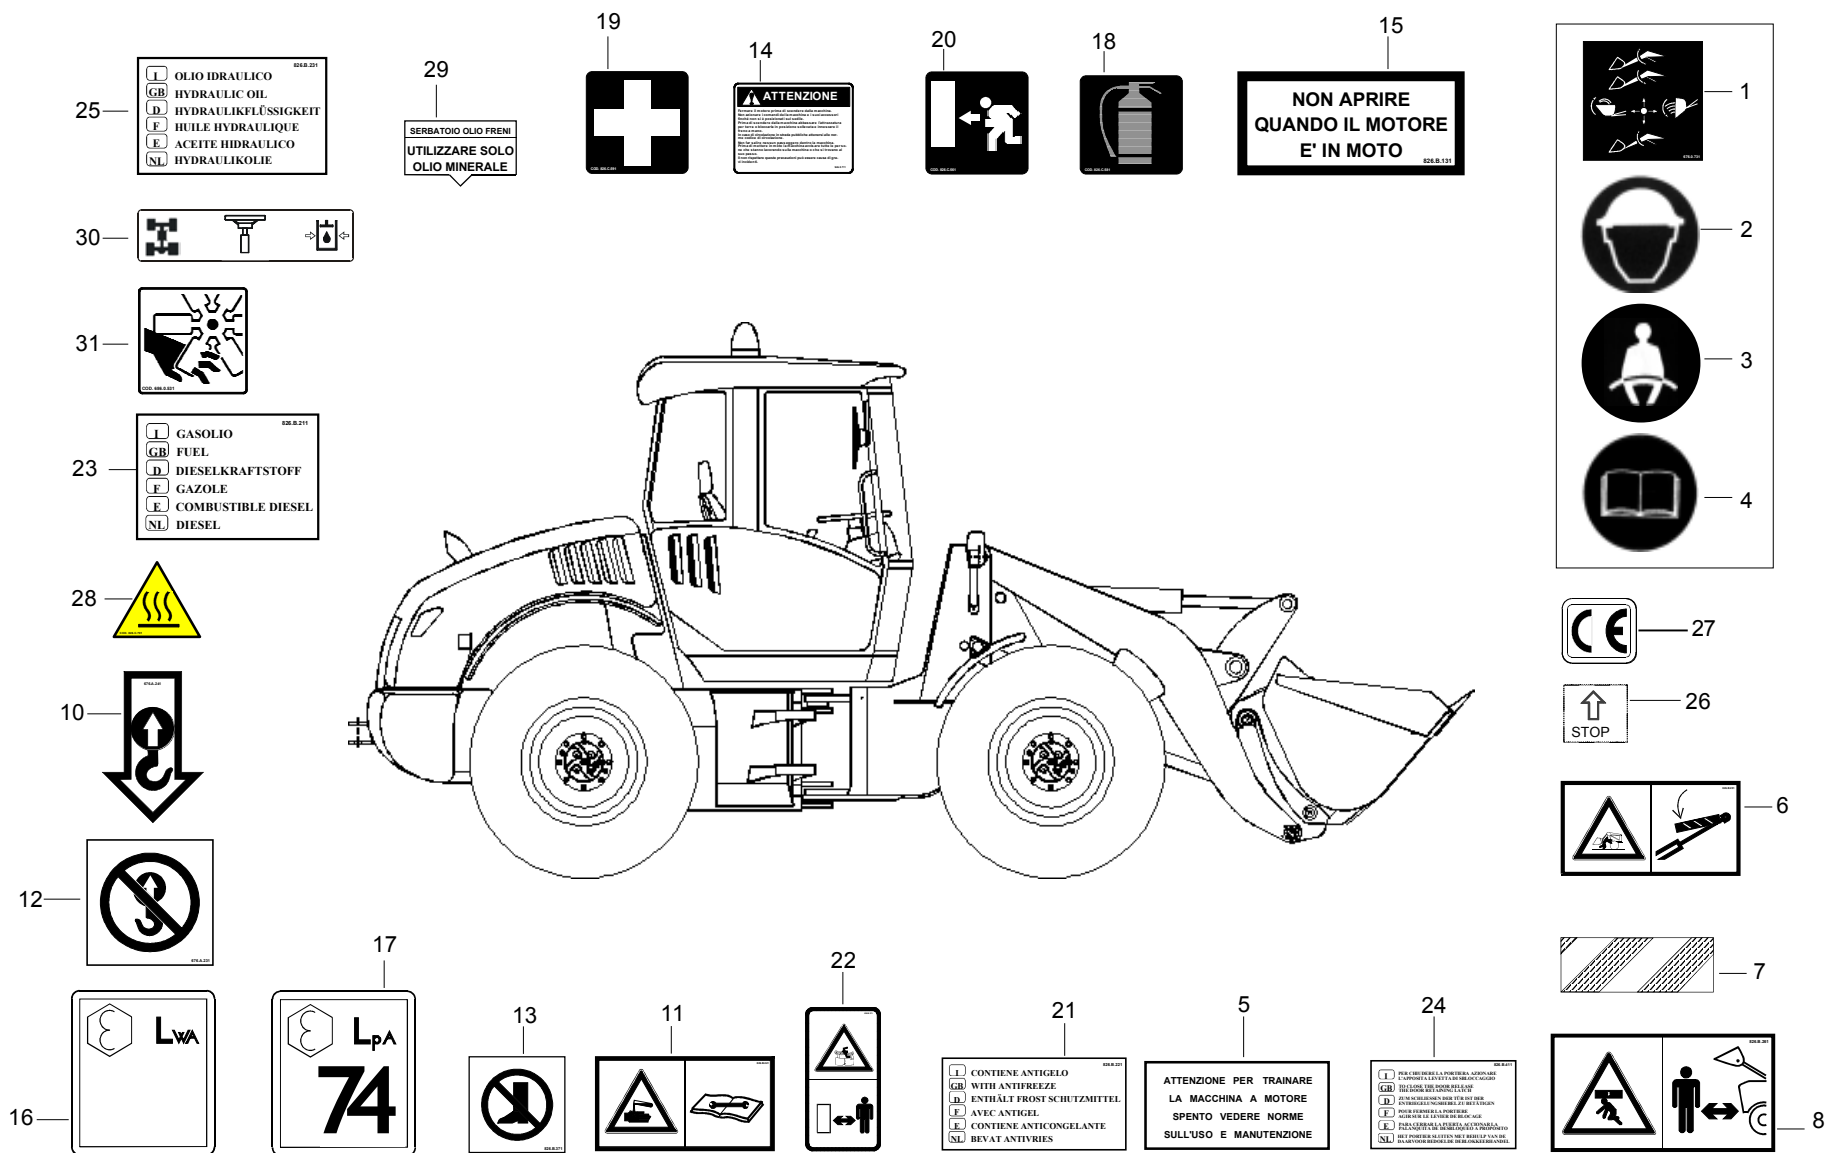

GB