


Heating and ventilation controls

Heating and ventilation controls are located on the right-hand side of the cab.

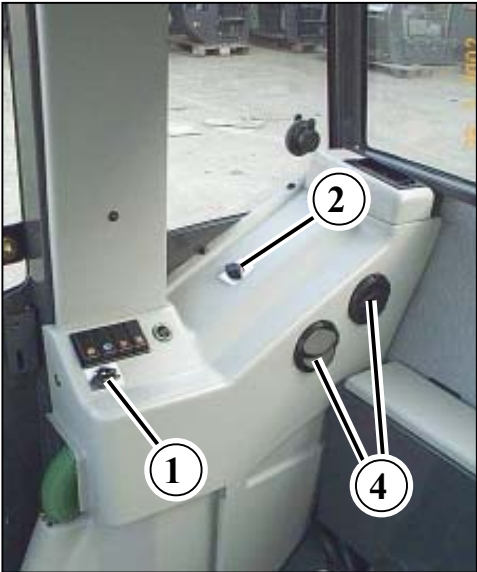

Heating


Rotate the heating faucet (2) until the desired position is obtained.
The lower (3), front and rear vents establish airflow direction.

Ventilation

Choose desired fan speed by acting on the handle (1).

Vents

The front (3) and right-hand-side rear (4) vents establish airflow direction.

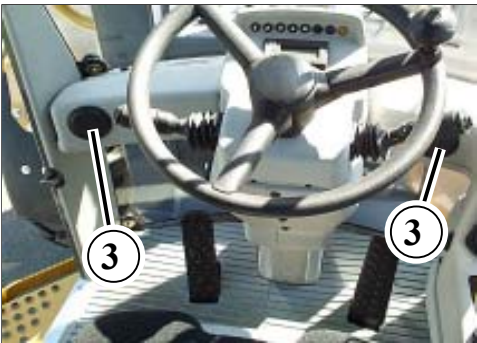

Front vents



INSTRUMENTS

Central dashboard




- 1 First gear warning light
- 2 Second gear warning light
- 3 Third gear warning light
- 4 Fourth gear warning light
- 5 Neutral gear warning light
- 6 Forward gear warning light
- 7 Reverse gear warning light
- 8 Bucket positioner warning light
- 9 Hours setting
- 10 Minutes setting
- 11 External temperature setting
- 12 Electronic instrument

Switches on side-dashboard

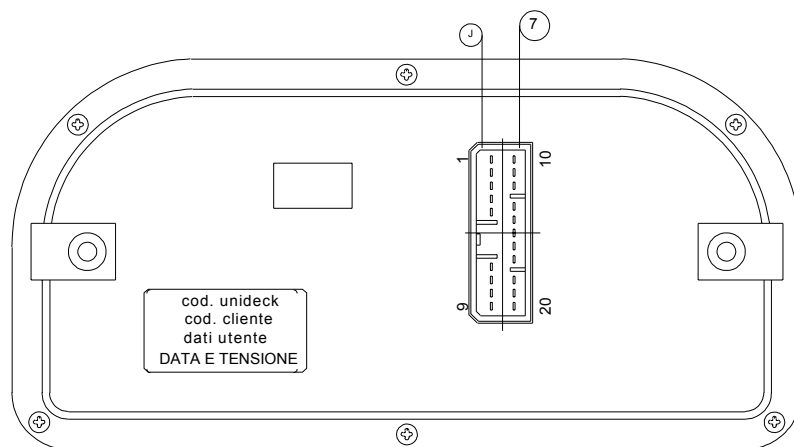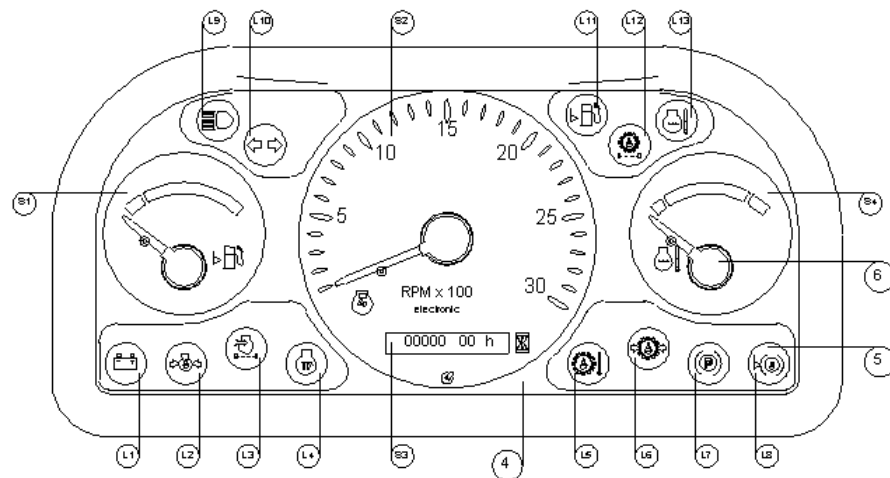

Wiring scheme of the panel on the side dashboard

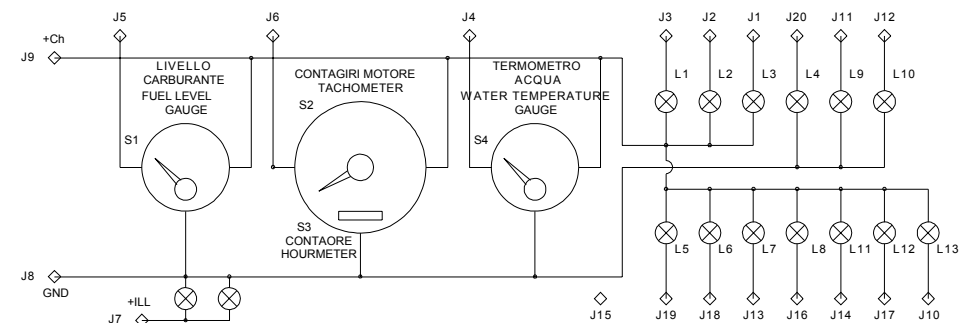

CONNECTOR: AMP 070 Multilock 20 ways

POS. POS.	PIN PIN	FUNZIONE CONNESSA FUNCTION	SEGNALE SIGNAL	COLORE FILO WIRE COLOR	POS. POS.	PIN PIN	FUNZIONE CONNESSA FUNCTION	SEGNALE SIGNAL	COLORE FILO WIRE COLOR
L3	J1	SPIA FILTRO ARIA (ROSSA) AIR CLEANER LAMP (RED)	NEGATIVO NEGATIVE		L9	J11	SPIA LUCI ABBAGLIANTI (BLU) DRIVING BEAMS LAMP (BLUE)	POSITIVO POSITIVE	
L2	J2	SPIA PRESS. OLIO MOTORE (ROSSO) ENGINE OIL PRESSURE LAMP (RED)	NEGATIVO NEGATIVE		L10	J12	SPIA IND. DI DIREZIONE (VERDE) DIRECTION INDICATOR LAMP (GREEN)	POSITIVO POSITIVE	
L1	J3	SPIA GENERATORE (ROSSO) GENERATOR LAMP (RED)	NEGATIVO NEGATIVE		L7	J13	SPIA FRENO A MANO (ROSSA) HAND BRAKE LAMP (RED)	NEGATIVO NEGATIVE	
S4	J4	STRUMENTO TERM. ACQUA WATER TEMPERATURE GAUGE	ohm		L11	J14	SPIA RISERVA CARBURANTE (GIALLO) FUEL RESERVE LAMP (YELLOW)	NEGATIVO NEGATIVE	
S1	J5	STRUMENTO IND. LIV. CARB. FUEL LEVEL GAUGE	ohm		B	J15	NC		
S2	J6	STRUMENTO CONTAGIRI TACHOMETER	Hz		L8	J16	SPIA LIVELLO OLIO FRENI (ROSSA) BRAKE OIL LEVEL LAMP (RED)	NEGATIVO NEGATIVE	
+ ILL	J7	ILLUMINAZIONE NOTTURNA (+) BACKLIGHTING (+)	+ LUCI		L12	J17	SPIA FITRO OLIO TRASMISS. (ROSSA) TRANSM. OIL FILTER LAMP (RED)	NEGATIVO NEGATIVE	
GND	J8	MASSA NEGATIVE			L6	J18	SPIA PRESS. ACCUMULAT. FRENI E MANIPOLAT. IDRAUL. (ROSSA) BRAKE OIL PRESS. LAMP (RED)	NEGATIVO NEGATIVE	
+Ch	J9	POSITIVO (+ Chiave) POSITIVE (+ Key)			L5	J19	SPIA TEMP. OLIO TRASM. (ROSSA) TRANSM. OIL TEMP. LAMP (RED)	NEGATIVO NEGATIVE	
L13	J10	SPIA ALTA TEMP. ACQUA (ROSSA) WATER TEMPERATURE LAMP (RED)	NEGATIVO NEGATIVE		L4	J20	SPIA PRERISC. CANDELETTE (GIALLO) ENGINE PREHEATING LAMP (YELLOW)	POSITIVO POSITIVE	



Steering column



1. Steering wheel adjustment lever

Located on the left side of the steering wheel.

Loosen the lever indicated in the picture, adjust the steering wheel in a suitable position, then lock the lever again.

2. Warning lights switch

Located on the right side of the steering wheel.

Simultaneously operates all directional indicators on the machine and the warning light in the switch at the same time.

Warning lights can be operated even if you do not turn on the ignition.

3. Brake pedal

Located on the cab floor on the left of the steering column.

4. Accelerator pedal

Located on the cab floor to the right of the steering column. Inclination of this pedal determines the Diesel rotation running and with gear on, vehicle transfer speed.