

## ON-ROAD TRANSFER



Observe the machine user standards described in this chapter, any other use must be considered forbidden unless you have prior authorisation from the manufacturer.

Before driving the vehicle on the road lock the loader gear into place by means of the special lever and ensure that all regulation-required safety devices are operative.




### Stage 1

Insert the locking rod for bucket and loader booms.



### Stage 2

Install the loader bucket teeth-protection.

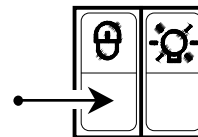

### Stage 3

Lock the loader controls by using the special lever.



### Stage 4

Adjust rear view mirrors correctly, position the pivotable headlight on top of the cab and turn it on.

### Stage 5

Lower the hand brake and start the engine.



Before driving the vehicle check tire wear and pressure.



Always wear the seat belt before driving the vehicle.



When on the road always use forward gears.



Monitor dials and warning lights during the transfer.



Before driving the vehicle on the road or working at night check that all lights and indicators are working properly.

GB