

AHLMANN

OPERATING INSTRUCTIONS



Articulated Loader **AL 6**

Ahlmann-Maschinenbau GmbH · D 2370 Rendsburg

PREFACE

This manual contains instructions for operating, servicing and preventive maintenance as well as a general technical description of the loader.

Please read this manual carefully and follow the instructions. Important repair work should be carried out by properly trained service personnel.

An engine manual with maintenance instructions is also supplied with each machine. Please follow these instructions closely.

It is further recommended that you read the accident prevention instructions for excavators and loaders prepared by the German construction association (Tiefbau Berufsgenossenschaft).

Ahlmann-Maschinenbau GmbH
Postfach 7 25
2370 Rendsburg

Telephone: 0 43 31/ 35 10 collective number
 0 43 31/ 3 51 - 2 42 spare part service
 0 43 31/ 3 51 - 2 79 technical consulting department
 0 43 31/ 3 51 - 2 25 customer service

Telex - 29 455 amb d

Issue 3/1983
from chassis number 22805100