

Table of contents

1	Fundamental safety instructions	1 - 1
1.1	Warnings and symbols	1 - 1
1.2	Use of the loader as authorized	1 - 1
1.3	Organizational measures	1 - 2
1.4	Selection of personnel and necessary qualification	1 - 4
1.5	Safety information for certain operating phases	1 - 5
1.5.1	Normal operation	1 - 5
1.5.2	Special work within the exploitation of the machine and elimination of defects during process of work; disposal	1 - 10
1.6	Instructions regarding special categories	1 - 14
1.6.1	Electrical energy	1 - 14
1.6.2	Hydraulic systems	1 - 16
1.6.3	Noise	1 - 16
1.6.4	Oil, grease and other chemical substances	1 - 17
1.6.5	Gas, dust, steam, smoke	1 - 17
1.7	Transport and towing; restart	1 - 18
1.8	Safety information for the contractor or the contractor's authorized personnel	1 - 19
1.8.1	Organizational measures	1 - 19
1.8.2	Selection of personnel and necessary qualification; additional duties	1 - 19
2	Signs	2 - 1
2.1	Warning and information signs	2 - 1
2.2	Fuses	2 - 2
2.3	Symbols	2 - 3
3	Technical data	3 - 1
3.1	AL 65	3 - 1
3.1.1	Machine	3 - 1
3.1.2	Engine	3 - 1
3.1.3	Starter	3 - 1
3.1.4	Alternator	3 - 1
3.1.5	Hydrostatic traction drive	3 - 1
3.1.6	Axle loads	3 - 2
3.1.7	Tires	3 - 2
3.1.8	Steering system	3 - 2
3.1.9	Brake system	3 - 2
3.1.10	Electrical system	3 - 2
3.1.11	Hydraulic system	3 - 3
3.1.12	Fuel supply system	3 - 3

3.1.13	Heating and ventilation system	3 - 3
3.1.14	Return-flow suction filter	3 - 3
3.1.15	Electrical contamination indicator	3 - 3
3.1.16	Oil cooler with temperature-controlled fan	3 - 3
3.2	AL 75	3 - 4
3.2.1	Machine	3 - 4
3.2.2	Engine	3 - 4
3.2.3	Starter	3 - 4
3.2.4	Alternator	3 - 4
3.2.5	Hydrostatic traction drive	3 - 4
3.2.6	Axle loads	3 - 5
3.2.7	Tires	3 - 5
3.2.8	Steering system	3 - 5
3.2.9	Brake system	3 - 5
3.2.10	Electrical system	3 - 5
3.2.11	Hydraulic system	3 - 6
3.2.12	Fuel supply system	3 - 6
3.2.13	Heating and ventilation system	3 - 6
3.2.14	Return-flow suction filter	3 - 6
3.2.15	Electrical contamination indicator	3 - 6
3.2.16	Oil cooler with temperature-controlled fan	3 - 6
3.3	AL 95	3 - 7
3.3.1	Machine	3 - 7
3.3.2	Engine	3 - 7
3.3.3	Starter	3 - 7
3.3.4	Alternator	3 - 7
3.3.5	Hydrostatic traction drive	3 - 7
3.3.6	Axle loads	3 - 8
3.3.7	Tires	3 - 8
3.3.8	Steering system	3 - 8
3.3.9	Brake system	3 - 8
3.3.10	Electrical system	3 - 8
3.3.11	Hydraulic system	3 - 9
3.3.12	Fuel supply system	3 - 9
3.3.13	Heating and ventilation system	3 - 9
3.3.14	Return-flow suction filter	3 - 9
3.3.15	Electrical contamination indicator	3 - 9
3.3.16	Oil cooler with temperature-controlled fan	3 - 9
3.4	Attachments AL 65	3 - 10
3.4.1	Buckets	3 - 10
3.4.2	Fork-lift attachment	3 - 12
3.4.3	Lifting hook	3 - 12
3.5	Attachments AL 75	3 - 14
3.5.1	Buckets	3 - 14

3.5.2	Fork-lift attachment	3 - 16
3.5.3	Lifting hook	3 - 16
3.6	Attachments AL 95	3 - 18
3.6.1	Buckets	3 - 18
3.6.2	Fork-lift attachment	3 - 20
3.6.3	Lifting hook	3 - 20
4	Description	4 - 1
4.1	Overview	4 - 1
4.2	Loader	4 - 2
4.3	Changing a wheel	4 - 8
4.4	Controls	4 - 10
4.5	Instrument panel	4 - 11
5	Operation	5 - 1
5.1	Checks before start-up	5 - 1
5.2	Starting up	5 - 1
5.2.1	Starting the diesel engine	5 - 1
5.2.2	Winter operation	5 - 2
5.2.2.1	Fuel	5 - 2
5.2.2.2	Changing the engine oil	5 - 3
5.2.2.3	Changing the oil in the hydraulic system	5 - 3
5.2.2.4	Anti-freezing agent for the windshield washer system	5 - 4
5.2.3	Driving the loader on public roads	5 - 4
5.2.4	Working with the loader	5 - 6
5.2.5	Heating and ventilation system	5 - 8
5.2.5.1	Adjusting the amount of air	5 - 8
5.2.5.2	Switching on the heater	5 - 8
5.3	Stopping loader operation	5 - 9
5.3.1	Parking the loader	5 - 9
5.3.2	Switching off the diesel engine	5 - 9
5.3.3	Switching off the heating and ventilation system	5 - 10
5.3.4	Leaving the loader	5 - 10
5.4	Adjusting the operator's seat	5 - 10
6	Attachments	6 - 1
6.1	Mounting and dismounting attachments without hydraulic connections	6 - 1
6.1.1	Standard/lightweight bucket	6 - 1
6.1.2	Fork-lift attachment	6 - 2
6.1.3	Lifting hook	6 - 3
6.2	Mounting and dismounting attachments with a hydraulic connection	6 - 4
6.2.1	Multi-purpose bucket	6 - 4
6.3	Using other attachments	6 - 7

7	Rescue, towing, lashing, lifting by crane	7 - 1
7.1	Rescue, towing, lashing	7 - 1
7.1.1	Rescue/towing of the articulated loader if the engine or drive has failed	7 - 1
7.1.1.1	Towing the articulated loader if the engine has failed	7 - 2
7.1.1.2	Towing the articulated loader if the drive has failed	7 - 5
7.2	Lifting by crane	7 - 7
 8	 Maintenance (maintenance plan)	 8 - 1
8.1	Notes regarding maintenance	8 - 1
8.2	Maintenance work	8 - 2
8.2.1	Checking the engine oil level	8 - 2
8.2.2	Changing the engine oil	8 - 2
8.2.3	Replacing the fuel prefilter	8 - 2
8.2.4	Maintaining/replacing the air filter	8 - 3
8.2.5	Replacing the safety cartridge	8 - 5
8.2.6	Checking the oil level in the front axle	8 - 5
8.2.7	Changing the oil in the front axle	8 - 6
8.2.8	Checking the oil level in the rear axle	8 - 7
8.2.8.1	Slow loader » 20 km/h «	8 - 7
8.2.8.2	Fast loader » 30 km/h «	8 - 7
8.2.9	Changing the oil in the rear axle	8 - 8
8.2.9.1	Slow loader » 20 km/h «	8 - 8
8.2.9.2	Rear axle of the fast loader » 30 km/h «	8 - 9
8.2.10	Checking the oil level in the planetary gear	8 -11
8.2.11	Changing the oil in the planetary gear	8 -11
8.2.12	Changing the oil in the hydraulic system	8 -12
8.2.13	Replacing the hydraulic oil filter insert	8 -13
8.2.14	Lubrication points	8 -14
8.2.14.1	Door of the driver's cabin	8 -14
8.2.14.2	Engine hood	8 -14
8.2.14.3	Multi-purpose bucket	8 -14
8.2.15	Replacing the starter battery	8 -15
8.2.16	Checking/adjusting the service/parking brake	8 -16
8.2.17	Maintaining/replacing the fresh air filter	8 -17
 9	 Malfunctions, causes and remedies	 9 - 1
 10	 Protection against theft	 10 - 1
10.1	Identifying features on the loader	10 - 1
10.2	Parking the loader	10 - 1
10.3	Transponder for drive-away interlock	10 - 2

