

- (1) Park the loader-excavator on a hard surface, if possible not on slopes.
- (2) Lower the bucket resp. the front-mounted attachment to the ground.
- (3) If a rear-mounted backhoe is fitted bring the backhoe in transport position.
- (4) Set the direction switch on "0".
- (5) Tighten parking brake.

ATTENTION

If parking on a slope cannot be avoided then it is necessary to place, in addition to the parking brake, in front of 2 wheels a wedge each and insert the articulation lock.

- (6) Stop the engine:
  - with the aircooled engine, the accelerator (I11.16/4) will be pressed down at the heel support so long till the engine stops.
  - with watercooled engine, the stop cable (I11.16/10) will be pulled so long till engine stops.

If diesel engine is very hot let the diesel run 2 - 3 minutes more in idling before stopping.

- (7) Turn the ignition key completely to the left and withdraw.