



7 Towing the loader -excavator

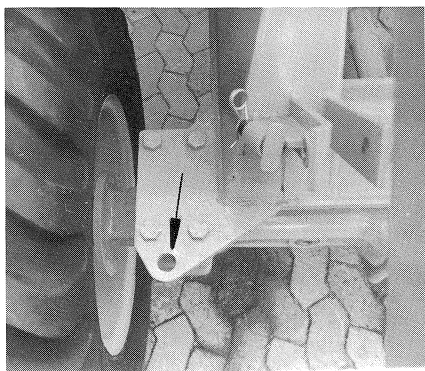

I11. 42


The loader-excavator has to be prepared acc. to para. 2. Additionally the shovel arm has to be lifted that dimension which is needed for the unblocking the tow bar.

The tow bar will be fastened at the chassis above the right axle fin (I11.42/arrow) if towed forward.

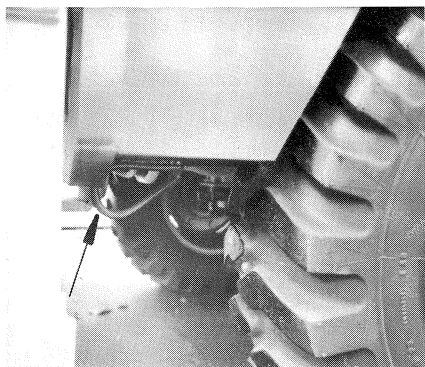

I11. 43

If vehicle has to be towed backward, the tow bar will be fastened in the eyelet at the right under the counter-weight (I11.43/arrow).

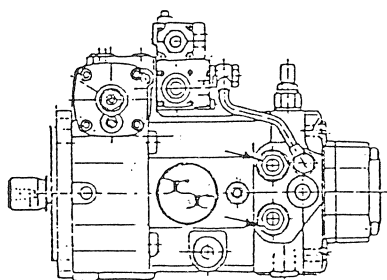

I11. 44

The hydrostatic transmission has to be switched to free-oil-flow before towing the vehicle. Unscrew the spring cage of both high-pressure limit valves 2 turns. Use fixed spanner NW22 (I11.44/arrow).

The towing speed has to be adjusted to the emergency steering.