

## 6. Switching off the loader

- (1) Park the machine on a hard surface and , whenever possible, on flat ground.
- (2) Lower bucket or attachment to the ground.
- (3) Place backhoe in "transport position".
- (4) Put drive-control lever into neutral "0" position.
- (5) Engage parking brake.

### WARNING!

If parking on a slope cannot be avoided then it is necessary to place, in addition to the parking brake, in front of 2 wheels a wedge each and insert the articulation lock.

- (6) Pull the switch "engine stop" till engine stops. If diesel engine is very hot let the diesel engine run 2 - 3 minutes more in idling before cutting-off.
- (7) Turn ignition key completely to the left and withdraw.