

AHLMANN

OPERATING INSTRUCTIONS



Articulated Loader

AL 8

Ahlmann-Maschinenbau GmbH · D 2370 Rendsburg

P R E F A C E

This manual contains operating and servicing instructions and preventive maintenance procedures as well as a general technical description of the loader

Please read this manual carefully and follow the instructions. Important repair work should be done by properly trained service personnel.

An engine manual with maintenance instructions is also supplied with each machine. Please follow these instructions closely.

It is further recommended that you read the accident prevention instructions for excavators and loaders prepared by the German construction association (Tiefbau Berufsgenossenschaft).

Ahlmann-Maschinenbau GmbH
P.O.Box 725
D-2370 Büdelsdorf

Telephone: (4331) 3510

Teletex: 433111

Issue 12/1984

from chassis number 108100