 


Signs

AHLMANN



- 1 Symbol: Stay out of the danger zone
- 2 Sign: **CAUTION!** - Moving loads is only permitted close to the ground!
- 3 Sign: Use mineral oil DIN 51524-HVLP 46 ISO VG 46 VI > 180
- 4 Sign: **» Only for fast loaders - 30 km/h «**
CAUTION!
The distribution gear may only be shifted when the loader is not moving. When shifting gears, set the drive direction lever to "0" (gear shift released after 5 sec.).
- 5 Sign: **» Only for loaders with pipe break protection «**
CAUTION!
The lift cylinders' pipe break protection is disabled when the lifting suspension is switched on.
Do not switch on the lifting suspension while the fork-lift or lifting hook attachment is fitted.
- 6 Sign: **CAUTION!** - Steering only possible when engine is running!
- 7 Sign: **CAUTION!**
The hydraulic quick-change device must only be locked if an attachment has been mounted.
- 8 Sign: Noise pressure level (chapt. 11.1.17, 11.2.17, 11.3.17, 11.4.17)
- 9 Sign: Sound power level (chapt. 11.1.17, 11.2.17, 11.3.17, 11.4.17)
- 10 Symbol: Hydraulic oil tank
- 11 Sign: Lettering "Low-noise construction machine"
- 12 Symbol: Lashing eyes
- 13 Symbol: Lifting hook
- 14 Sign: Maximum speed
- 15 Sign: Maintenance plan
- 16 Sign: Tire pressure
- 17 Symbol: Quick-change device locked
- 18 Symbol: Stay out of the unprotected articulation area
- 19 Symbol: Fuel tank
- 20 Symbol: Hand lever for working hydraulics (4-12/6)
 - Hand lever forward - Lower bucket arm
 - Hand lever to the rear - Lift bucket arm
 - Hand lever to the left - Tilt up quick-change device/attachment
 - Hand lever to the right - Tilt down quick-change device/attachment
- 21 Symbol: Standard-Joystick
 - Drive switch (4-12/5)
 - Drive direction - forward
 - 0
 - backward
 - Pushbutton for auxiliary hydraulics (4-12/3)
 - Quick-change device
 - upper pushbutton - lock
 - bottom pushbutton - unlock
 (only in conjunction with 4-10/1)
 - Multi-purpose bucket
 - upper pushbutton - close
 - bottom pushbutton - open
 - Pushbutton for differential lock (4-12/2)
 - Hydraulic drive stages (4-12/1)
 - Hare symbol - fast
 - Turtle symbol - slow
- 22 Symbol: Ball block valve for working/auxiliary hydraulics closed
- 23 Symbol: Read and observe the operating instructions before commissioning.
Make sure that all other users have also read the safety instructions!
- 24 Machine type label (includes the identification number of the vehicle)
- 25 Sign: Annual inspection as per UVV
- 26 Sign: UVV badge
- 27 Symbol: Open only when the engine is not running