AHLMANN

Introduction

Preface

Ahlmann's swivel shovel loaders, telescopic loaders, articulated loaders and front loaders are machines included in the vast product range of Ahlmann's Baumaschinen covering a wide variety of working tasks.

Decades of experience in the construction of earth-moving machines, the wide range of attachments available as well as modern production facilities, careful testing and highest quality demands guarantee the highest degree of reliability of your **Ahlmann** machine.

The extent of documentation delivered by the manufacturer includes the following:

- Loader operating instructions
- Engine operating instructions
- Loader spare parts list
- Engine spare parts list
- EC conformity declaration

Operating instructions

The operating instructions contain all the information which the user requires for operation and maintenance.

In the "Maintenance" section, all maintenance work and operation tests are described which can be carried out by trained personnel.

This section does not cover more extensive maintenance work that is reserved to personnel authorized and trained by the manufacturer. In particular, this applies to facilities governed by Motor Vehicle Construction and Use Regulations and the Regulations for the Prevention of Accidents.

Due to the construction modifications reserved by the manufacturer, there may be differences in the figures; however, this has no influence on the technical contents.

How to use this manual

Explanations

- The designations "left" and "right" are to be seen from the driver's seat in driving direction.
- Optional equipment: means: not fitted in series.

Information about illustrations

- (3-35) means: chapter 3, fig. 35
- (3-35/1) means: chapter 3, fig. 35, item 1
- (3-35/arrow) means: chapter 3, fig. 35,

Table of contents

AHLMANN

Abbreviations used:

UVV = Unfallverhütungsvorschrift (Accident Prevention Regulations)

StVZO = Straßenverkehrzulassungsordnung (German Traffic Regulations)

Edition: 09.2006 Print: 09.2006