

Table of Contents

1 Fundamental safety instructions

1.1	Warnings and symbols	1	-	2
1.2	Proper use of the loader	1	-	2
1.3	Organisational measures	1	-	2
1.4	Selection of personnel and necessary qualifications	1	-	3
1.5	Safety Information for Certain Operating Phases	1	-	4
1.5.1	Normal Operation	1	-	4
1.5.2	Special work regarding the use of the machine and elimination of defects during work; disposal ...	1	-	7
1.6	Instructions regarding special categories of danger	1	-	9
1.6.1	Electrical energy	1	-	9
1.6.2	Hydraulics	1	-	10
1.6.3	Noise	1	-	10
1.6.4	Oil, grease and other chemical substances	1	-	11
1.6.5	Gas, dust, steam, smoke	1	-	11
1.7	Transport and towing; recommissioning	1	-	11
1.8	Safety information for the contractor or the contractor's authorised personnel	1	-	12
1.8.1	Organizational measures	1	-	12
1.8.2	Selection of personnel and necessary qualifications; basic responsibilities	1	-	12

2 Signs

3 Protection against theft

3.1	Identifying features on the loader	3	-	2
3.2	Parking the loader	3	-	2
3.3	Transponder for drive-away interlock	3	-	3

4 Description

4.1	Overview	4	-	2
4.2	Swivel unit and axle support	4	-	3
4.3	Floating position	4	-	3
4.4	Bucket position indicator	4	-	3
4.5	Lifting device suspension(option)	4	-	3
4.6	Fan reversal (option)	4	-	4
4.7	Wheel change	4	-	4
4.8	Controls	4	-	6
4.9	Fuses	4	-	10
4.10	Teach function	4	-	11
4.10.1	How to activate the teach function	4	-	11
4.10.2	How to activate the emergency traction mode (when there is an accelerator fault)	4	-	11
4.10.3	How to activate the emergency traction mode (when there is a fault with the EP magnet of the hydro motor)	4	-	11

5 Operation

5.1	Checks before start-up	5	-	2
5.2	Commissioning	5	-	2
5.2.1	Starting the diesel engine	5	-	2
5.2.2	Winter operation	5	-	3
5.2.2.1	Fuel	5	-	3
5.2.2.2	Engine oil change	5	-	4
5.2.2.3	Changing oil in the hydraulic system	5	-	4
5.2.2.4	Anti-freezing agent for the windshield washer system	5	-	4
5.2.3	Driving the loader on public roads	5	-	4
5.2.3.1	Carrying a bucket	5	-	5

5.2.4	Working with the loader	5	-	6
5.2.5	Heater and ventilation system	5	-	7
5.2.5.1	Set the air flow	5	-	7
5.2.5.2	Switching on the heater	5	-	7
5.3	Decommissioning the loader	5	-	8
5.3.1	Parking the loader	5	-	8
5.3.2	Switching off the diesel engine	5	-	8
5.3.3	Switching off the heater and ventilation system	5	-	8
5.3.4	Leaving the loader	5	-	8
5.4	Adjusting the driver's seat	5	-	9
5.5	Switching the steering type	5	-	9

6 Attachments

6.1	Mounting and dismounting attachments without hydraulic connections to loaders with bolt locks (standard equipment)	6	-	2
6.1.1	Standard/lightweight bucket	6	-	2
6.2	Mounting and dismounting attachments without hydraulic connections to loaders with claw locks (optional equipment)	6	-	3
6.2.1	Standard/lightweight bucket	6	-	3
6.2.2	Fork-lift attachment	6	-	4
6.3	Mounting and dismounting attachments with hydraulic connections to loaders with claw locks (optional equipment)	6	-	4
6.3.1	Multi-purpose bucket	6	-	4
6.3.2	Front-end excavator	6	-	7
6.3.2.1	Shovel replacement	6	-	7
6.3.3	Grab bucket	6	-	8
6.4	Use of additional attachments	6	-	9

7 Rescue, towing, lashing, lifting by crane

7.1	Rescue, towing, lashing	7	-	2
7.1.1	Rescue/towing of the swivel shovel loader if the engine or drive has failed	7	-	2
7.1.1.1	Towing the swivel shovel loader if the engine has failed	7	-	2
7.1.1.2	Towing the swivel shovel loader if the drive has failed	7	-	5
7.2	Lifting by crane	7	-	7

8 Maintenance

8.1	Notes regarding maintenance	8	-	3
8.2	Maintenance work	8	-	4
8.2.1	Engine oil level check	8	-	4
8.2.2	Coolant level check	8	-	4
8.2.3	Oil level check for axles	8	-	4
8.2.3.1	Rear axle	8	-	4
8.2.3.2	Planetary gear	8	-	5
8.2.3.3	Front axle	8	-	5
8.2.4	Oil level check (distribution gear)	8	-	5
8.2.5	Oil level check of the hydraulic oil reservoir	8	-	6
8.2.6	Oil change, engine	8	-	6
8.2.7	Oil change, axles	8	-	6
8.2.7.1	Rear axle	8	-	6
8.2.7.2	Planetary gear	8	-	7
8.2.7.3	Front axle	8	-	7
8.2.8	Oil change, distribution gear	8	-	8
8.2.9	Oil change, hydraulic system	8	-	8
8.2.10	Replacing the suction / return flow filter cartridge	8	-	9
8.2.11	Maintaining/replacing the air filter	8	-	10
8.2.12	Replacing the safety cartridge	8	-	11

8.2.13	Replacing the fuel filter	8	-	11
8.2.14	Replacing the starter batteries	8	-	11
8.2.15	Cleaning the cooler	8	-	12
8.2.16	Maintaining/replacing the fresh air filter	8	-	12
8.2.17	Checking/adjusting the service/spring parking brake	8	-	12
8.2.18	Lubrication points	8	-	13
8.2.18.1	Rear axle	8	-	13
8.2.18.2	Rear axle pivot bolts	8	-	13
8.2.18.3	Front axle	8	-	14
8.2.18.4	Rear cardan shaft	8	-	14
8.2.18.5	Front cardan shaft	8	-	15
8.2.18.6	Ball bearing ring	8	-	15
8.2.18.7	Bucket assembly	8	-	16
8.2.18.8	Engine flaps	8	-	17
8.2.18.9	Multi-purpose bucket	8	-	17

9 Faults, causes and remedies

10 Diagrams

10.1	Electric wiring diagram	10	-	1
10.2	Hydraulic diagram	10	-	4
10.2.1	AS 210e hydraulic diagram (claw lock)	10	-	4
10.2.2	AS 210e hydraulic diagram (bolt lock)	10	-	5

11 Technical data (loader)

11.1	Loader	11	-	2
11.2	Engine	11	-	2
11.3	Starter	11	-	2
11.4	Alternator	11	-	2
11.5	Hydrostatic drive motor	11	-	2
11.6	Axle loads	11	-	3
11.7	Tyres	11	-	3
11.8	Steering system	11	-	3
11.9	Brake system	11	-	3
11.10	Electrical system	11	-	3
11.11	Hydraulic system	11	-	3
11.11.1	Working hydraulics	11	-	3
11.11.2	Swivel unit hydraulics	11	-	3
11.11.3	Support system	11	-	4
11.12	Fuel supply system	11	-	4
11.13	Heater and ventilation system (driver's cabin)	11	-	4
11.14	Suction / return flow filter (hydraulics)	11	-	4
11.15	Electric contamination indicator	11	-	4
11.16	Oil cooler (hydrostatic)	11	-	4
11.17	Noise emission	11	-	4

12 Technical data (attachments)

12.1	Buckets	12	-	2
12.2	Fork-lift attachment	12	-	4
12.3	Lifting hook	12	-	4
12.4	Front-end excavator	12	-	6
12.5	Grab bucket	12	-	6

13 Additional options

13.1	Additional options	13	-	2
------	--------------------------	----	---	---

