

OPERATING INSTRUCTIONS SWING SHOVEL LOADER

GB



AS 50

MECALAC Baumaschinen GmbH Am Friedrichsbrunnen 2 D-24782 Büdelsdorf
Telefon (+49)(0)4331/351-325 Internet: www.mecalac.de
Telefax (+49)(0)4331/351-404 E-Mail: info@mecalac.de

You will find the

spare parts documentation

online at:

https://www.mecalac.de/abm_doc/

Log in as final customer and specify the **FIN** number (truck identification number) of your **MECALAC** truck. When you already own an **MECALAC** truck, you can also view the spare parts documentation here. To do so, please specify the **FIN** number of this truck.

If required, you can print the documentation.

Introduction

Preface

MECALAC's swivel shovel loader, articulated loader and loader excavator with backhoe are machines included in **MECALAC's** vast product range covering a wide variety of working tasks.

Decades of experience in the construction of earthmoving machines, the wide range of attachments available as well as modern production facilities, careful testing and highest quality demand guarantee the highest degree of reliability of your **MECALAC** machine.

The extent of documentation delivered by the manufacturer includes the following:

- Equipment operating instructions
- Engine operating instructions
- Equipment spare parts list
- Equipment spare parts list
- EC conformity declaration

Operation instructions

The operation instruction contains all the information which the user requires for operation and maintenance.

In the "Maintenance" section, all maintenance work and operation tests are described which can be carried out by trained personnel. Repairs on a larger scale which may only be carried out by specialized personnel or by personnel authorized and trained by the manufacturer, in particular those units subject to the Motor Vehicle Construction and Use Regulations and the Regulations for the Prevention of Accidents, are not described.


Due to the construction modifications reserved by the manufacturer, there may be differences in the figures; however, this has no influence on the technical contents.

How to handle this manual

Explanations

- The designation "left" and "right" is to be seen from the driver's seat in driving direction.
- Optional equipment means: not fitted in series.

Information about illustrations

- (3-35)
means: chapter 3, fig. 35
- (3-35/1)
means: chapter 3, fig. 35, item 1
- (3-35/arrow)
means: chapter 3, fig. 35, 

Abbreviations used:

UVV = Unfallverhütungsvorschrift (Accident Prevention Regulations)

StVZO = Straßenverkehrszulassungsordnung (German Traffic Regulations)

Edition: 01.2012