

OPERATING INSTRUCTIONS SWING SHOVEL LOADER

GB



AS 700 / AS 900

MECALAC Baumaschinen GmbH Am Friedrichsbrunnen 2 D-24782 Büdelsdorf
Telefon (+49)(0)4331/351-325 Internet: www.mecalac.de
Telefax (+49)(0)4331/351-404 E-Mail: info@mecalac.de

You will find the

spare parts documentation

online at:

https://www.mecalac.de/abm_doc/

Log in as final customer and specify the **FIN** number (truck identification number) of your MECALAC truck. When you already own an **MECALAC** truck, you can also view the spare parts documentation here. To do so, please specify the **FIN** number of this truck.

If required, you can print the documentation.

Introduction

Preface

Mecalac's swivel shovel loaders, articulated loaders and loader excavators with backhoe are machines included in **Mecalac's** vast product range covering a wide variety of working tasks.

Decades of experience in the construction of earth-moving machines, the wide range of attachments available as well as modern production facilities, careful testing and highest quality demands guarantee the highest degree of reliability of your **Mecalac** machine.

The documentation delivered by the manufacturer includes the following:

- Loader operating instructions
- Engine operating instructions
- Loader spare parts list
- Engine spare parts list
- EC conformity declaration

Operating instructions

The operating instructions contain all the information which the user requires for operation and maintenance.

In the "Maintenance" section, all maintenance work and operation tests are described which can be carried out by trained personnel.

This section does not cover more extensive maintenance work that is reserved to personnel authorized and trained by the manufacturer. In particular, this applies to facilities governed by Motor Vehicle Construction and Use Regulations and the Regulations for the Prevention of Accidents.

Due to the construction modifications reserved by the manufacturer, there may be differences in the figures; however, this has no influence on the technical contents.

How to use this manual

Explanations

- The designations "**left**" and "**right**" are to be seen from the driver's seat in the driving direction.
- Special equipment (opt.)
means: not fitted in series.

Information about illustrations

- (3-35)
means: chapter 3, fig. 35
- (3-35/1)
means: chapter 3, fig. 35, item 1
- (3-35/arrow)
means: chapter 3, fig. 35, 

Abbreviations used

UVV = Unfallverhütungsvorschrift (Accident Prevention Regulations)

StVZO = Straßenverkehrszulassungsordnung (German Traffic Regulations)

Edition: 07.2014

Printed: 07.2014

Table of Contents

1 Fundamental safety instructions

1.1	Warnings and symbols	1	-	2
1.2	Proper use of the loader	1	-	2
1.3	Organizational measures	1	-	2
1.4	Selection of personnel and necessary qualifications; basic responsibilities	1	-	3
1.5	Safety Information for Certain Operating Phases	1	-	4
1.5.1	Normal Operation	1	-	4
1.5.2	Special work regarding the use of the machine and elimination of defects during work; disposal	1	-	7
1.6	Instructions regarding special categories of danger	1	-	9
1.6.1	Electrical energy	1	-	9
1.6.2	Hydraulics	1	-	10
1.6.3	Noise	1	-	10
1.6.4	Oil, grease and other chemical substances	1	-	11
1.6.5	Gas, dust, steam, smoke	1	-	11
1.7	Transport and towing; recommissioning	1	-	11
1.8	Safety information for the contractor or the contractor's authorized personnel	1	-	12
1.8.1	Organizational measures	1	-	12
1.8.2	Selection of personnel and necessary qualifications; basic responsibilities	1	-	12

2 Signs

3 Protection against theft

3.1	Identifying features on the loader	3	-	2
3.2	Parking the loader	3	-	2
3.3	Drive-away interlocks	3	-	3
3.3.1	Drive-away interlock transponder	3	-	3
3.3.2	Encodable drive-away interlock	3	-	3

4 Description AS 700

4.1	Overview	4	-	2
4.2	Loader	4	-	3
4.3	Wheel change	4	-	6
4.4	Controls	4	-	8
4.4.1	Multifunction panel	4	-	10
4.4.2	Fuses/relays	4	-	11
4.5	Gear shift	4	-	16
4.5.1	Slow loader » 20 km/h «	4	-	16
4.5.2	Fast loader » 40 km/h «	4	-	16

4 Description AS 900

4.1	Overview	4	-	2
4.2	Loader	4	-	3
4.3	Wheel change	4	-	6
4.4	Controls	4	-	8
4.4.1	Multifunction panel	4	-	10
4.4.2	Fuses/relays	4	-	11
4.4.3	Controls at the driver's cabin ceiling	4	-	16
4.5	Gear shift	4	-	17
4.5.1	Slow loader » 20 km/h «	4	-	17
4.5.2	Fast loader » 40 km/h «	4	-	17

5 Operation

5.1	Checks before start-up	5	-	2
5.2	Commissioning	5	-	2
5.2.1	Start the diesel engine	5	-	2
5.2.2	Winter operation	5	-	3
5.2.2.1	Fuel	5	-	3
5.2.2.2	Engine oil change	5	-	3
5.2.2.3	Oil change, hydraulic system	5	-	3
5.2.2.4	Anti-freezing agent for windshield washer system	5	-	4
5.2.3	Driving the loader on public roads	5	-	4
5.2.4	Working with the loader	5	-	5
5.2.5	Heater and ventilation system	5	-	6
5.2.5.1	Setting the air flow	5	-	6
5.2.5.2	Switching on the heater	5	-	6
5.3	Decommissioning the loader	5	-	7
5.3.1	Parking the loader	5	-	7
5.3.2	Switch off the diesel engine	5	-	7
5.3.3	Switch off the heater and ventilation system	5	-	7
5.3.4	Leaving the loader	5	-	7
5.4	Adjusting the driver's seat	5	-	8
5.4.1	Grammer seat	5	-	8
5.4.2	KAB seat	5	-	10
5.5	Switching the steering type	5	-	11
5.5.1	Overview of switching options	5	-	11

6 Attachments

6.2	Mounting and dismounting attachments with hydraulic connections	6	-	2
6.2.1	Multi-purpose bucket	6	-	2
6.3	Mounting and dismounting rear attachments	6	-	4
6.3.1	Rear mounting plate	6	-	4
6.4	Use of additional attachments	6	-	5

7 Rescue, towing, lashing, craning

7.1	Rescue, towing, lashing	7	-	2
7.1.1	Towing the front loader if the engine has failed or if the propulsion drive has failed	7	-	2
7.1.1.1	Towing the front loader if the engine has failed	7	-	2
7.1.1.2	Towing the front loader if the propulsion drive has failed	7	-	4
7.2	Lifting by crane	7	-	5

8 Maintenance

8	Maintenance schedule	8	-	1
8.1	Notes regarding maintenance	8	-	2
8.2	Maintenance work	8	-	3
8.2.1	Engine inspections	8	-	3
8.2.1.1	Engine oil level check	8	-	3
8.2.1.2	Cooling water check	8	-	3
8.2.1.3	V-belt check	8	-	4
8.2.1.4	V-belt tension check	8	-	4
8.2.1.5	Other important engine checks	8	-	4
8.2.2	Oil level check for axles	8	-	4
8.2.2.1	Rear axle	8	-	4
8.2.2.2	Planetary gear	8	-	5
8.2.2.3	Front axle	8	-	5
8.2.2.4	Oil level check (ancillary/distribution gear)	8	-	5

8.2.2.4.1	Ancillary/distribution gear of slow loaders „20 km/h“	8	-	5
8.2.2.4.2	Ancillary/distribution gear of fast loaders „25 - 40 km/h“	8	-	6
8.2.3	Oil level check, hydraulic oil reservoir	8	-	6
8.2.4	Fuel filter	8	-	6
8.2.4.1	Draining the water trap of the fuel filter	8	-	6
8.2.4.2	Replacing the fuel filter	8	-	7
8.2.4.2	Cleaning/replacing the fuel prefilter	8	-	8
8.2.5	Oil change, engine	8	-	8
8.2.6	Changing the engine oil filter insert	8	-	9
8.2.7	Oil change, axles	8	-	10
8.2.7.1	Rear axle	8	-	10
8.2.7.2	Planetary gear	8	-	11
8.2.7.3	Front axle	8	-	11
8.2.7.4	Oil change, ancillary/distribution gear	8	-	12
8.2.7.4.1	Oil change, ancillary/distribution gear of slow loaders „20 km/h“	8	-	12
8.2.7.4.2	Oil change, ancillary/distribution gear of fast loaders „25 - 40 km/h“	8	-	13
8.2.8	Oil change, hydraulic system	8	-	13
8.2.9	Changing the hydraulic oil filter insert	8	-	14
8.2.10	Maintaining/replacing the air filter	8	-	15
8.2.11	Replacing the safety cartridge	8	-	16
8.2.12	Maintaining/replacing the fresh air filter	8	-	17
8.2.13	Replacing the starter battery	8	-	18
8.2.14	Checking the thickness of the disc brake pad	8	-	19
8.2.15	Checking/topping up the brake fluid level	8	-	20
8.3	Grease lubrication points	8	-	20
8.3.1	Bucket assembly	8	-	20
8.3.2	Ball bearing ring	8	-	22
8.3.3	Rear axle	8	-	23
8.3.4	Rear axle pivot bolts	8	-	23
8.3.5	Front axle	8	-	23
8.3.6	Engine hood	8	-	24
8.3.7	Multi-purpose bucket	8	-	24

10 Circuit diagrams

10.1	Electric wiring diagram	10	-	1
10.2	Hydraulic circuit diagram	10	-	7

11 Technical data (loader)

11.1	AS 700	11	-	2
11.1.1	Loader	11	-	2
11.1.2	Engine	11	-	2
11.1.2.1	48 kW engine	11	-	2
11.1.2.1	55 kW engine	11	-	2
11.1.3	Starter	11	-	2
11.1.4	Alternator	11	-	2
11.1.5	Hydrostatic drive motor	11	-	3
11.1.6	Axle loads	11	-	3
11.1.7	Tyres	11	-	3
11.1.8	Steering system	11	-	3
11.1.9	Brakes	11	-	3
11.1.10	Electrical system	11	-	3
11.1.11	Hydraulic system	11	-	3
11.1.11.1	Swivel unit	11	-	4
11.1.11.2	Support system	11	-	4
11.1.12	Fuel supply system	11	-	4
11.1.13	Heater and ventilation system	11	-	4
11.1.14	Full flow suction filter	11	-	4

11.1.15	Electric contamination indicator	11	-	4
11.1.16	Combination cooler with temperature-controlled fan	11	-	4
11.1.17	Noise emission	11	-	4
11.2.18	Vibrations	11	-	4
11.2	AS 900	11	-	5
11.2.1	Loader	11	-	5
11.2.2	Engine	11	-	5
11.2.2.1	55 kW engine	11	-	5
11.2.2.2	63 kW engine	11	-	5
11.2.3	Starter	11	-	5
11.2.4	Alternator	11	-	5
11.2.5	Hydrostatic drive motor	11	-	6
11.2.6	Axle loads	11	-	6
11.2.7	Tyres	11	-	6
11.2.8	Steering system	11	-	6
11.2.9	Brakes	11	-	6
11.2.10	Electrical system	11	-	6
11.2.11	Hydraulic system	11	-	7
11.2.11.1	Swivel unit	11	-	7
11.2.11.2	Support system	11	-	7
11.2.12	Fuel supply system	11	-	7
11.2.13	Heater and ventilation system	11	-	7
11.2.14	Full flow suction filter	11	-	7
11.2.15	Electric contamination indicator	11	-	7
11.2.16	Combination cooler with temperature-controlled fan	11	-	7
11.2.17	Noise emission	11	-	7
11.2.18	Vibrations	11	-	7

12 Technical data (attachments)

12.1	AS 700	12	-	2
12.1.1	Buckets	12	-	2
12.1.2	Fork-lift attachment/lifting hook	12	-	4
12.1.3	Lifting hook	12	-	4
12.2	AS 900	12	-	6
12.2.1	Buckets	12	-	6
12.2.2	Fork-lift attachment/lifting hook	12	-	8
12.2.3	Lifting hook	12	-	8

13 Additional options

13.1	Additional options	13	-	2
13.1.4	Hand throttle	13	-	4
13.1.5	Inching speed	13	-	4