



Signs

2 Signs

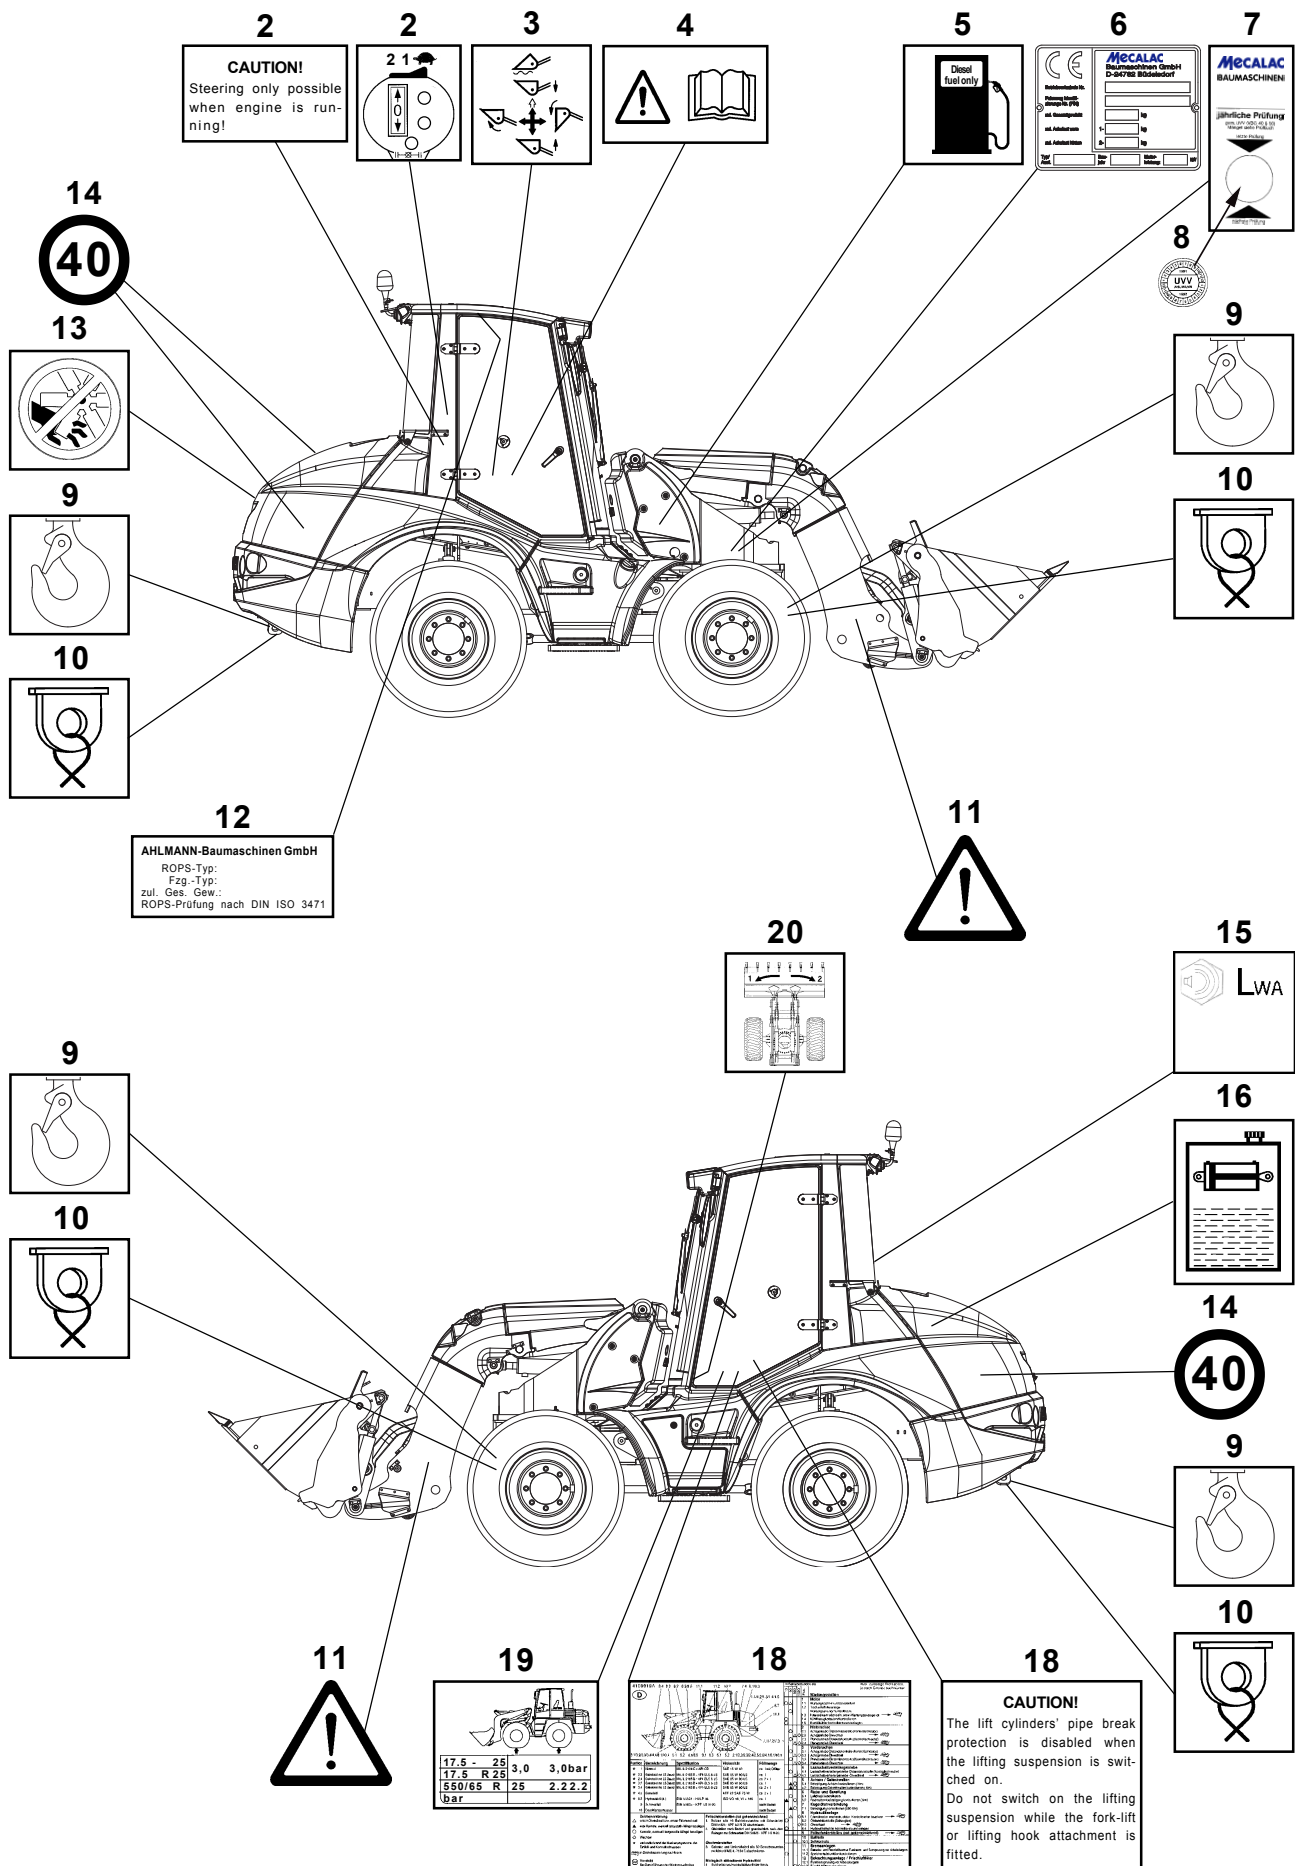

- 1 Sign: **CAUTION!** - Steering only possible when engine is running!
- 2 Symbol: Standard joystick

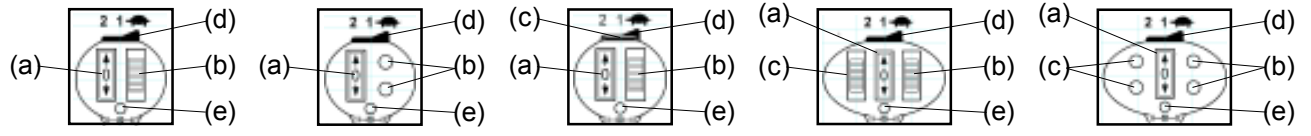

 - a) Drive switch (4-11/4)
 - Drive direction - forward
 - 0
 - reverse
 - b) Auxiliary hydraulics (4-11/2)
 - upper pushbutton:
 - Lock attachment
 - Close multipurpose bucket
 - bottom pushbutton:
 - Unlock attachment » in conjunction with 4-8/6 «
 - Open multipurpose bucket
 - c) Zusatzhydraulik (4-11/2): 2. Kreis
 - oberer Taster bzw. Verstellrad nach vorn drehen:
 - Frontbagger-Stiel ausschwenken
 - Greifer gegen den Uhrzeigersinn drehen
 - unterer Taster bzw. Verstellrad nach hinten drehen:
 - Frontbagger-Stiel einschwenken
 - Greifer im Uhrzeigersinn drehen
 - d) Gear shift (4-11/1)
 - 2nd gear
 - 1st gear
 - Alpha max. (turtle symbol)
 - e) Pushbutton for differential lock (4-11/3)
- 3 Symbol: Working hydraulics
Hand lever for working and auxiliary hydraulics (4-10/1).
 - to the front - Lower bucket arm
 - To the rear - Lift bucket arm
 - To the left - Tilt up quick-change device/attachment
 - To the right - Tilt down quick-change device/attachment
 - beyond its pressure point to the front- Floating position
- 4 Symbol: Read and observe the operating instructions before commissioning.
Make sure that all other users have read the safety instructions!
- 5 Symbol: Fuel tank
- 6 Machine type label (includes the identification number of the vehicle)
- 7 Sign: Annual inspection as per UVV
- 8 Sign: UVV badge
- 9 Symbol: Lifting hook
- 10 Symbol: Lashing eyes
- 11 Symbol: Stay out of the danger zone
- 12 Type label: Operator's cabin
- 13 Symbol: Open only when the engine is not running
- 14 Sign: Maximum speed
- 15 Sign: Sound power level (chapt. 11.1.17 and 11.2.17)
- 16 Symbol: Hydraulic oil tank (below engine hood)
- 17 Sign: **» Only for loaders with pipe break protection «**
CAUTION!
The lift cylinders' pipe break protection is disabled when the lifting suspension is switched on.
Do not switch on the lifting suspension while the fork-lift or lifting hook attachment is fitted.
- 18 Sign: Maintenance schedule
- 19 Sign: Tyre pressure
- 20 Symbol: Swivelling