

Failure of heating system.	Fuse in fuse box or heating unit is defective. Control device switches off.	Replace fuse. Set rotary switch to position "0" and repeat starting process.
Hose couplings of attachments cannot be connected.	Increased pressure due to heat effect on the attachment. Increased pressure in the basic unit.	Carefully loosen screwed connection at the rapid-action coupling, oil sprays off, the increased pressure breaks down. Tighten screwed connection. Depressurize lines by moving the pilot valve back and forth.

9 General instructions

The following is supplied together with the unit:

- Operating instructions for the engine. Please take all details regarding the engine from these operating instructions.
- Industrial leaflet "earth-moving machinery" of the employer's liability insurance association for civil engineering.
- Spare parts list - basic unit.