



Signs

2 Signs

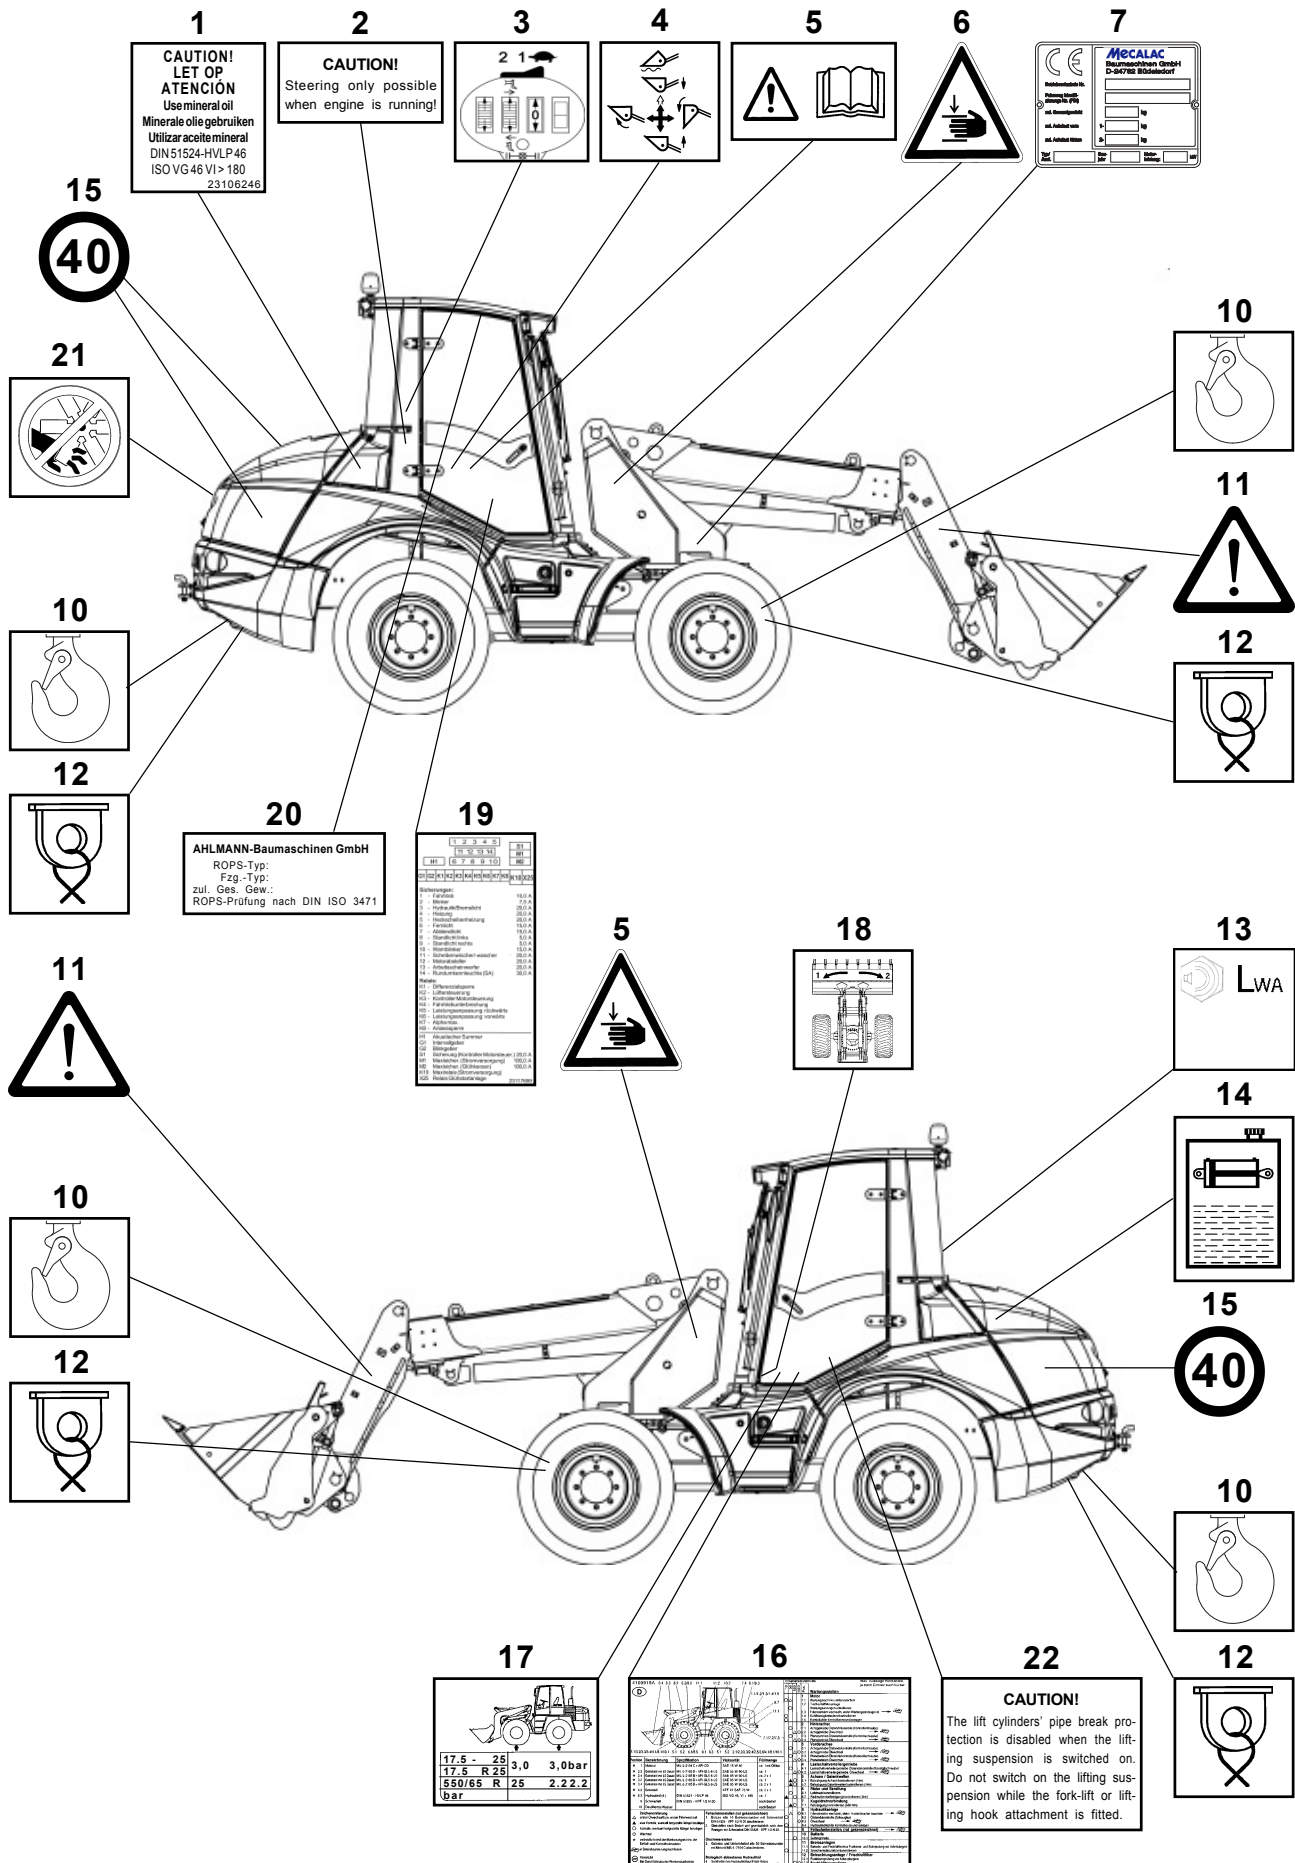

- 1 Sign: **CAUTION!** - Use mineral oil - DIN 51524-HVLP 46 - ISO VG 46 VI > 180
 2 Sign: **CAUTION!** - Steering only possible when engine is running!
 3 Symbol: Joystick

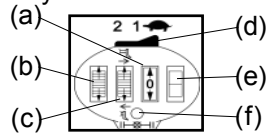

- a) Drive switch (4-13/3)
 - Drive direction - forward
 - 0
 - reverse
 b) Auxiliary hydraulics (4-13/6): 2nd circuit
 - Turn handwheel to the front:
 - Swivel out front-end excavator stick
 - Turn grab bucket in counter clockwise direction
 - Turn handwheel to the rear:
 - Swivel in front-end excavator stick
 - Turn grab bucket in clockwise direction
 c) Telescope cylinder (4-13/5)
 - Turn handwheel to the front: Extend telescope
 - Turn handwheel to the rear: Retract telescope
 d) Gear shift (4-13/1) - 2nd gear
 - 1st gear
 - Alpha max. (turtle symbol)
 e) Auxiliary hydraulics (4-13/2): 1st circuit
 - Press upper switch half
 - Lock attachment
 - Close multipurpose bucket
 - Press lower switch half
 - Unlock attachment » in conjunction with 4-10/7 «
 - Open multipurpose bucket
 f) Pushbutton for differential lock (4-13/4)

- 4 Symbol: Working hydraulics
 Hand lever for working and auxiliary hydraulics (4-12/1).

- To the front - Lower bucket arm
 - To the rear - Lift bucket arm
 - To the left - Tilt up quick-change device/attachment
 - To the right - Tilt down quick-change device/attachment
 - Beyond its pressure point to the front - Floating position

- 5 Symbol: Read and observe the operating instructions before commissioning.
 Make sure that all other users have read the safety instructions!

- 6 Symbol: Beware of hand injuries

- 7 Machine type label (includes the identification number of the vehicle)

- 8 Sign: Annual inspection as per UVV

- 9 Sign: UVV badge

- 10 Symbol: Lifting points for transportation by crane

- 11 Symbol: Stay out of the danger zone

- 12 Symbol: Fixing eyes for towing and lashing

- 13 Sign: Sound power level (sect. 11.1.17)

- 14 Symbol: Hydraulic oil tank (below engine hood)

- 15 Sign: Maximum speed

- 16 Sign: Maintenance schedule

- 17 Sign: Tyre pressure

- 18 Symbol: Swivelling

- 19 Sign: Fuses/relays

- 20 Type label: Operator's cabin

- 21 Symbol: Open only when the engine is not running

- 22 Sign: » **Only for loaders with pipe break protection** «

CAUTION!

The lift cylinders' pipe break protection is disabled when the lifting suspension is switched on.

Do not switch on the lifting suspension while the fork-lift or lifting hook attachment is fitted.