

Table of Contents

1 Fundamental safety instruction

1.1	Warnings and symbols	1	-	2
1.2	Proper use of the loader	1	-	2
1.3	Organizational measures	1	-	2
1.4	Selection of personnel and necessary qualifications	1	-	3
1.5	Safety information for certain operating phases	1	-	4
1.5.1	Normal operation	1	-	4
1.5.2	Special work regarding the use of the machine and elimination of defects during work; disposal	1	-	7
1.6	Instructions regarding special categories of danger	1	-	9
1.6.1	Electrical energy	1	-	9
1.6.2	Hydraulics	1	-	10
1.6.3	Noise	1	-	10
1.6.4	Oil, grease and other chemical substances	1	-	11
1.6.5	Gas, dust, steam, smoke	1	-	11
1.7	Transport and towing; recommissioning	1	-	11
1.8	Safety information for the contractor or the contractor's authorized personnel	1	-	12
1.8.1	Organizational measures	1	-	12
1.8.2	Selection of personnel and necessary qualifications; basic responsibilities	1	-	12

2 Signs

3 Protection against theft

3.1	Identifying features on the loader	3	-	2
3.2	Parking the loader	3	-	2
3.3	Drive-away interlocks	3	-	3
3.3.1	Transponder for drive-away interlock	3	-	3
3.3.2	Encodable drive-away interlock	3	-	3

4 Description

4.1	Overview	4	-	2
4.2	Loader	4	-	3
4.2.1	Undercarriage	4	-	3
4.2.2	Tyres	4	-	3
4.2.3	Steering system	4	-	3
4.2.4	Brake system	4	-	4
4.2.5	Battery	4	-	4
4.2.6	Fuel supply system	4	-	4
4.2.7	Air filter device	4	-	4
4.2.8	Lift, tip and telescoping devices	4	-	4
4.2.9	Swivel unit and axle support	4	-	5
4.2.10	Floating position	4	-	5
4.2.11	Lifting device suspension	4	-	5
4.2.12	Pipe break safety device	4	-	5
4.2.13	Swivel restriction	4	-	6
4.2.14	Load indicator	4	-	6
4.2.15	Overload cut-off	4	-	7
4.2.16	Equipment	4	-	7
4.3	Wheel change	4	-	8
4.4	Controls	4	-	9
4.5	Instrument panel	4	-	10

5 Operation

5.1	Checks before start-up	5	-	2
5.2	Commissioning	5	-	2
5.2.1	Start the diesel engine	5	-	2
5.2.2	Winter operation	5	-	3
5.2.2.1	Fuel	5	-	3
5.2.2.2	Engine oil change	5	-	3
5.2.2.3	Changing the oil in the hydraulic system	5	-	3
5.2.2.5	Anti-freezing agent for the windshield washer system	5	-	4
5.2.3	Driving the loader on public roads	5	-	4
5.2.3.1	Carrying a bucket	5	-	4
5.2.5	Working with the loader	5	-	5
5.2.5	Heater and ventilation system	5	-	7
5.2.5.1	Setting the air flow	5	-	7
5.2.5.2	Switching on the heater	5	-	7
5.3	Decommissioning the loader	5	-	8
5.3.1	Parking the loader	5	-	8
5.3.2	Switching off the diesel engine	5	-	8
5.3.3	Switching off the heater and ventilation system	5	-	8
5.3.5	Leaving the loader	5	-	8
5.4	Adjusting the driver's seat	5	-	9
5.4.1	Isri seat	5	-	9
5.4.2	Grammer seat	5	-	9
5.5	Switching the steering type	5	-	11

6 Attachments

6.1	Mounting and dismounting attachments without hydraulic connections	6	-	2
6.1.1	Standard/lightweight bucket	6	-	2
6.1.2	Fork-lift attachment	6	-	3
6.1.2.1	Picking up an elevated load	6	-	3
6.1.3	Lifting hook	6	-	4
6.2	Mounting and dismounting attachments with hydraulic connections	6	-	4
6.2.1	Multi-purpose bucket	6	-	4
6.3	Use of additional attachments	6	-	6

7 Rescue, towing, lashing, lifting by crane

7.1	Rescue, towing, lashing	7	-	2
7.1.1	Rescue/towing of the swivel shovel loader if the engine or drive has failed	7	-	2
7.1.1.1	Towing the swivel shovel loader if the engine has failed	7	-	2
7.1.1.2	Towing the loader if the drive has failed	7	-	4
7.2	Lifting by crane	7	-	5

8 Maintenance

8	Maintenance Plan	8	-	1
8.1	Notes regarding maintenance	8	-	2
8.2	Maintenance work	8	-	3
8.2.1	Engine oil level check	8	-	3
8.2.2	Oil level check for axles	8	-	3
8.2.2.1	Rear axle » slow loader «	8	-	3
8.2.2.2	Rear axle » fast loader «	8	-	3
8.2.2.3	Planetary gear	8	-	4
8.2.2.4	Front axle	8	-	4
8.2.3	Oil level check in the hydraulic oil reservoir	8	-	5
8.2.4	Oil change, engine	8	-	5
8.2.5	Oil change, axles	8	-	5
8.2.5.1	Rear axle » slow loader «	8	-	5
8.2.5.2	Rear axle » fast loader «	8	-	6

8.2.5.3	Planetary gear	8	-	7
8.2.5.4	Front axle	8	-	7
8.2.6	Oil change, hydraulic system	8	-	8
8.2.7	Changing the hydraulic oil filter cartridges	8	-	9
8.2.8	Maintaining/replacing the air filter	8	-	9
8.2.9	Replacing the safety cartridge	8	-	10
8.2.10	Replacing the fuel filter	8	-	11
8.2.11	Replacing the starter battery	8	-	11
8.2.12	Maintaining/replacing the fresh air filter	8	-	11
8.2.13	Checking/adjusting the parking brake play	8	-	12
8.3	Grease/oil lubrication points	8	-	13
8.3.1	Rear axle pivot bolts	8	-	13
8.3.2	Rear axle	8	-	13
8.3.3	Front axle	8	-	13
8.3.4	Ball bearing ring	8	-	14
8.3.5	Wear liners on the telescope arm	8	-	14
8.3.6	Telescope arm	8	-	14
8.3.7	Driver's cabin door	8	-	18
8.3.8	Multi-purpose bucket	8	-	18
8.3.9	Oil lubrication points	8	-	19
8.3.9.1	Parking brake	8	-	19
8.3.9.2	Supporting valve actuator	8	-	19

9 Faults, causes and remedies

10 Wiring diagrams

10.1	Electric wiring diagram	10	-	1
10.2	Hydraulic circuit diagram	10	-	4

11 Technical data (loader)

11.1	Loader	11	-	2
11.2	Engine	11	-	2
11.3	Starter	11	-	2
11.4	Alternator	11	-	2
11.5	Hydrostatic drive motor	11	-	2
11.6	Axle loads	11	-	3
11.7	Tyres	11	-	3
11.8	Steering system	11	-	3
11.9	Brake system	11	-	3
11.10	Electrical system	11	-	3
11.11	Hydraulic system	11	-	3
11.11.1	Swivel unit	11	-	4
11.11.2	Support system	11	-	4
11.12	Fuel supply system	11	-	4
11.13	Heater and ventilation system	11	-	4
11.14	Full flow suction filter	11	-	4
11.15	Electric contamination indicator	11	-	4
11.16	Oil cooler with temperature-controlled fan	11	-	4
11.17	Noise emission	11	-	4

12 Technical data (attachments)

12.1	Buckets	12	-	2
12.2	Fork-lift attachment	12	-	3
12.3	Lifting hook	12	-	4

13 Additional options, modifications, notes on inspection for loaders

13.1 Additional options 13 - 2

13.2 Modifications 13 - 2