

**Additional options,
modifications,
Notes on inspection for loaders**

13 Additional options, modifications, notes on inspection for loaders**13.1 Additional options**

none

13.2 Modifications

none

Index

A

- Air condition 5-6
- Air filter clogging indicator
 - Air filter clogging indicator 4-8
- Attachments
 - Multi-purpose bucket 6-3

B

- Battery charge indicator 4-8
- Battery main switch 8-15
- Beacon light 4-7
- Bucket position indicator 4-5

C

- Changing the hydraulic oil filter cartridge 8-10
- Checking/adjusting the service/parking brake 8-16
 - Compensation tank for brake hydraulic oil 8-16
- Circuit Diagram
 - Hydraulic circuit diagram 10-7
- Circuit diagram 10-3
 - Electric circuit diagram 10-3
- Compensation tank for brake hydraulic oil 8-16
- Compensation tank for coolant 8-3
- Controls 4-7
 - 2-pole socket 4-7
 - Beacon light 4-7
 - Differential lock 4-7
 - Door release 4-7
 - Drive switch 4-7
 - Hazard flasher system 4-7
 - Heating/air condition 4-7
 - High beam 4-7
 - Hydraulic drive levels 4-7
 - Interval wiper, front 4-7
 - Lifting device suspension 4-7
 - Low beam 4-7
 - Parking light 4-7
 - Permanent auxiliary hydraulics 4-7
 - Pilot valve for auxiliary hydraulics 4-7
 - Pilot valve for working hydraulics 4-7
 - Pipe break protection 4-7
 - Rear window heater 4-7
 - Release of quick-change device 4-7
 - Road light 4-7
 - Road lights 4-7
 - Signal horn 4-7
 - Starter switch 4-7
 - Steering column adjustment 4-7
 - Steering column switch 4-7
 - Windshield washer, front 4-7
 - Windshield wiper, front 4-7
 - Windshield wiper/washer, rear 4-7

- Working lights 4-7
- Cooling water temperature gauge 4-8

D

- Differential lock 4-7
- Door release 4-7
- Drive switch 4-7
- Drive-away interlock transponder 3-3
- Drive-away interlocks 3-3
 - Drive-away interlock transponder 3-3
 - Encodable drive-away interlock 3-3
- Driver's seat 5-8
 - Euro seat 5-8
 - Grammer seat 5-8

E

- Electric circuit diagram 10-3
- Encodable drive-away interlock 3-3

F

- Faults, causes and remedies 9-2
- Float position 4-5
- Float safeguard 7-6
- Fuel gauge 4-8
- Fuses 4-9

G

- Grease points 8-11
 - Articulated pendulum joint/steering cylinder 8-11
 - Bucket assembly 8-12
 - Driver's cab doors 8-14
 - Engine hood 8-14
 - Multi-purpose bucket 8-15

H

- Hazard flasher system 4-7
- Heating/air condition 4-7
- High beam 4-7, 4-8
- Hydraulic circuit diagram 10-7
- Hydraulic drive levels 4-7
- Hydraulic drive stage fast 4-8
- Hydraulic drive stage slow 4-8
- Hydraulic oil filter clogging indicator 4-8

I

- Indicator lamp 4-8
 - Battery charge indicator 4-8
 - Fuel on reserve 4-8
 - High beam 4-8
 - Hydraulic drive stage fast 4-8
 - Hydraulic drive stage slow 4-8
 - Hydraulic oil filter clogging indicator 4-8

Parking brake 4-8
Preheating 4-8
Turn signal 4-8
Interval wiper, front 4-7

L

Lifting device suspension 4-5, 4-7
Lock lever 4-7
 Pilot valve for working and auxiliary hydraulics 4-7
 Steering column adjustment 4-7
Low beam 4-7

M

Maintaining/replacing the air filter 8-4
Maintaining/replacing the fresh air filter 8-16
Multi-purpose bucket 6-3
Multifunction panel 4-8

O

Oil change 8-4
 Engine 8-4
 Front axle 8-6
 Rear axle 8-8
Oil level check 8-4
 Engine 8-4
 Front axle 8-5
 Planetary gear 8-9
 Rear axle 8-7
Oil lubrication points 8-15
Operating hours counter 4-8

P

Parking light 4-7
Permanent auxiliary hydraulics 4-7
Pilot valve for auxiliary hydraulics 2-3, 4-7
Pilot valve for working hydraulics 2-3, 4-7
Pipe break protection 2-3, 4-5, 4-7
Preheating 4-8

R

Rear window heater 4-7
Relays 4-9
Release of quick-change device 4-7
Replacing the safety cartridge 8-5
Replacing the starter battery 8-15
Rev meter 4-8
Road light 4-7
Road lights 4-7

S

Signal horn 4-7
Signal lamp 4-8
 Engine oil pressure 4-8
 Hydraulic oil temperature 4-8

Low cooling water 4-8
Start-up 5-2
Starting the diesel engine 5-2
Winter operation 5-3
 Anti-freezing agent, windshield washer 5-4
 Engine oil change 5-3
 Fuel 5-3
 Hydraulic system oil change 5-3
Starter switch 4-7
Steering column adjustment 4-7
Steering column switch 4-7

T

Theft protection 3-2
 Drive-away interlock 3-3
 truck identification number 3-2
Technical data (attachments) 12-1
 AX 100 attachments 12-10
 Buckets 12-10
 Fork-lift attachment 12-12
 Lifting hook 12-12
 AX 70 attachments 12-2
 Buckets 12-2
 Fork-lift attachment 12-4
 Lifting hook 12-4
 AX 85 attachments 12-6
 Buckets 12-6
 Fork-lift attachment 12-8
 Lifting hook 12-8
Technical data (loader) 11-1
 AX 100 11-8
 Alternator 11-8
 Axle loads 11-8
 Brake system 11-9
 Combination cooler 11-10
 Electric system 11-9
 Engine 11-8
 Fuel supply system 11-9
 Heating and ventilation system 11-9
 Hydraulic system 11-9
 Hydrostatic drive 11-8
 Loader 11-8
 Noise emission 11-10
 Return suction filter 11-10
 Starter 11-8
 Steering system 11-9
 Tyres 11-9
 AX 70 11-2
 Alternator 11-2
 Axle loads 11-2
 Brake system 11-3
 Combination cooler 11-4
 Electric system 11-3
 Engine 11-2
 Fuel supply system 11-3
 Heating and ventilation system 11-4
 Hydraulic system 11-3

- Hydrostatic drive 11-2
- Loader 11-2
- Noise emission 11-4
- Return suction filter 11-4
- Starter 11-2
- Steering system 11-3
- Tyres 11-3
- AX 85 11-5
 - Alternator 11-5
 - Axle loads 11-5
 - Brake system 11-6
 - Combination cooler 11-7
 - Electric system 11-6
 - Engine 11-5
 - Fuel supply system 11-6
 - Heating and ventilation system 11-7
 - Hydraulic system 11-6
 - Hydrostatic drive 11-5
 - Loader 11-5
 - Noise emission 11-7
 - Return suction filter 11-7
 - Starter 11-5
 - Steering system 11-6
 - Tyres 11-6
- Towing the articulated loader 7-2
 - when the engine has failed 7-2
 - when the traction drive has failed 7-5
- Truck identification number 3-2

W

- Wedge 8-3
- Wheel change 4-6
- Window 4-9
 - Opening 4-9
 - Opening and locking 4-9
- Windshield washer, front 4-7
- Windshield wiper, front 4-7
- Windshield wiper/washer, rear 4-7
- Winter operation 5-3
 - Anti-freezing agent, windshield washer 5-4
 - Engine oil change 5-3
 - Fuel 5-3
 - Hydraulic system oil change 5-3
- Working lights 4-7

Index

A

- Air condition 5-6
- Air filter clogging indicator
 - Air filter clogging indicator 4-8
- Articulation safeguard 1-7, 7-6, 8-3
- Attachments
 - Multi-purpose bucket 6-3

B

- Battery charge indicator 4-8
- Battery main switch 8-15
- Beacon light 4-7
- Bucket position indicator 4-5

C

- Changing the hydraulic oil filter cartridge 8-10
- Checking/adjusting the service/parking brake 8-16
 - Compensation tank for brake hydraulic oil 8-16
- Circuit Diagram
 - Hydraulic circuit diagram 10-7
- Circuit diagram 10-3
 - Electric circuit diagram 10-3
- Compensation tank for brake hydraulic oil 8-16
- Compensation tank for coolant 8-3
- Controls 4-7
 - 2-pole socket 4-7
 - Beacon light 4-7
 - Differential lock 4-7
 - Door release 4-7
 - Drive switch 4-7
 - Hazard flasher system 4-7
 - Heating/air condition 4-7
 - High beam 4-7
 - Hydraulic drive levels 4-7
 - Interval wiper, front 4-7
 - Lifting device suspension 4-7
 - Low beam 4-7
 - Parking light 4-7
 - Permanent auxiliary hydraulics 4-7
 - Pilot valve for auxiliary hydraulics 4-7
 - Pilot valve for working hydraulics 4-7
 - Pipe break protection 4-7
 - Rear window heater 4-7
 - Release of quick-change device 4-7
 - Road light 4-7
 - Road lights 4-7
 - Signal horn 4-7
 - Starter switch 4-7
 - Steering column adjustment 4-7
 - Steering column switch 4-7
 - Windshield washer, front 4-7
 - Windshield wiper, front 4-7

- Windshield wiper/washer, rear 4-7
- Working lights 4-7
- Cooling water temperature gauge 4-8

D

- Differential lock 4-7
- Door release 4-7
- Drive switch 4-7
- Drive-away interlock transponder 3-3
- Drive-away interlocks 3-3
 - Drive-away interlock transponder 3-3
 - Encodable drive-away interlock 3-3
- Driver's seat 5-8
 - Euro seat 5-8
 - Grammer seat 5-8

E

- Electric circuit diagram 10-3
- Encodable drive-away interlock 3-3

F

- Faults, causes and remedies 9-2
- Float position 4-5
- Float safeguard 7-6
- Fuel gauge 4-8
- Fuses 4-9

G

- Grease points 8-11
 - Articulated pendulum joint/steering cylinder 8-11
 - Bucket assembly 8-12
 - Driver's cab doors 8-14
 - Engine hood 8-14
 - Multi-purpose bucket 8-15

H

- Hazard flasher system 4-7
- Heating/air condition 4-7
- High beam 4-7, 4-8
- Hydraulic circuit diagram 10-7
- Hydraulic drive levels 4-7
- Hydraulic drive stage fast 4-8
- Hydraulic drive stage slow 4-8
- Hydraulic oil filter clogging indicator 4-8

I

- Indicator lamp 4-8
 - Battery charge indicator 4-8
 - Fuel on reserve 4-8
 - High beam 4-8
 - Hydraulic drive stage fast 4-8
 - Hydraulic drive stage slow 4-8
 - Hydraulic oil filter clogging indicator 4-8

Parking brake 4-8
Preheating 4-8
Turn signal 4-8
Interval wiper, front 4-7

L

Lifting device suspension 4-5, 4-7
Lock lever 4-7
 Pilot valve for working and auxiliary hydraulics 4-7
 Steering column adjustment 4-7
Low beam 4-7

M

Maintaining/replacing the air filter 8-4
Maintaining/replacing the fresh air filter 8-16
Multi-purpose bucket 6-3
Multifunction panel 4-8

O

Oil change 8-4
 Engine 8-4
 Front axle 8-6
 Rear axle 8-8
Oil level check 8-4
 Engine 8-4
 Front axle 8-5
 Planetary gear 8-9
 Rear axle 8-7
Oil lubrication points 8-15
Operating hours counter 4-8

P

Parking light 4-7
Permanent auxiliary hydraulics 4-7
Pilot valve for auxiliary hydraulics 2-3, 4-7
Pilot valve for working hydraulics 2-3, 4-7
Pipe break protection 2-3, 4-5, 4-7
Preheating 4-8

R

Rear window heater 4-7
Relays 4-9
Release of quick-change device 4-7
Removing the driver's cab 4-11
Replacing the safety cartridge 8-5
Replacing the starter battery 8-15
Rev meter 4-8
Road light 4-7
Road lights 4-7

S

Signal horn 4-7
Signal lamp 4-8
 Engine oil pressure 4-8
 Hydraulic oil temperature 4-8

Low cooling water 4-8
Start-up 5-2
Starting the diesel engine 5-2
Winter operation 5-3
 Anti-freezing agent, windshield washer 5-4
 Engine oil change 5-3
 Fuel 5-3
 Hydraulic system oil change 5-3
Starter switch 4-7
Steering column adjustment 4-7
Steering column switch 4-7

T

Theft protection 3-2
 Drive-away interlock 3-3
 truck identification number 3-2
Technical data (attachments) 12-1
 AX 100 attachments 12-10
 Buckets 12-10
 Fork-lift attachment 12-12
 Lifting hook 12-12
 AX 70 attachments 12-2
 Buckets 12-2
 Fork-lift attachment 12-4
 Lifting hook 12-4
 AX 85 attachments 12-6
 Buckets 12-6
 Fork-lift attachment 12-8
 Lifting hook 12-8
Technical data (loader) 11-1
 AX 100 11-8
 Alternator 11-8
 Axle loads 11-8
 Brake system 11-9
 Combination cooler 11-10
 Electric system 11-9
 Engine 11-8
 Fuel supply system 11-9
 Heating and ventilation system 11-9
 Hydraulic system 11-9
 Hydrostatic drive 11-8
 Loader 11-8
 Noise emission 11-10
 Return suction filter 11-10
 Starter 11-8
 Steering system 11-9
 Tyres 11-9
 AX 70 11-2
 Alternator 11-2
 Axle loads 11-2
 Brake system 11-3
 Combination cooler 11-4
 Electric system 11-3
 Engine 11-2
 Fuel supply system 11-3
 Heating and ventilation system 11-4
 Hydraulic system 11-3

- Hydrostatic drive 11-2
- Loader 11-2
- Noise emission 11-4
- Return suction filter 11-4
- Starter 11-2
- Steering system 11-3
- Tyres 11-3
- AX 85 11-5
 - Alternator 11-5
 - Axle loads 11-5
 - Brake system 11-6
 - Combination cooler 11-7
 - Electric system 11-6
 - Engine 11-5
 - Fuel supply system 11-6
 - Heating and ventilation system 11-7
 - Hydraulic system 11-6
 - Hydrostatic drive 11-5
 - Loader 11-5
 - Noise emission 11-7
 - Return suction filter 11-7
 - Starter 11-5
 - Steering system 11-6
 - Tyres 11-6
- Towing the articulated loader 7-2
 - when the engine has failed 7-2
 - when the traction drive has failed 7-5
- Truck identification number 3-2

W

- Wedge 8-3
- Wheel change 4-6
- Window 4-9
 - Opening 4-9
 - Opening and locking 4-9
- Windshield washer, front 4-7
- Windshield wiper, front 4-7
- Windshield wiper/washer, rear 4-7
- Winter operation 5-3
 - Anti-freezing agent, windshield washer 5-4
 - Engine oil change 5-3
 - Fuel 5-3
 - Hydraulic system oil change 5-3
- Working lights 4-7