


Signs

2 Signs

AHLMANN

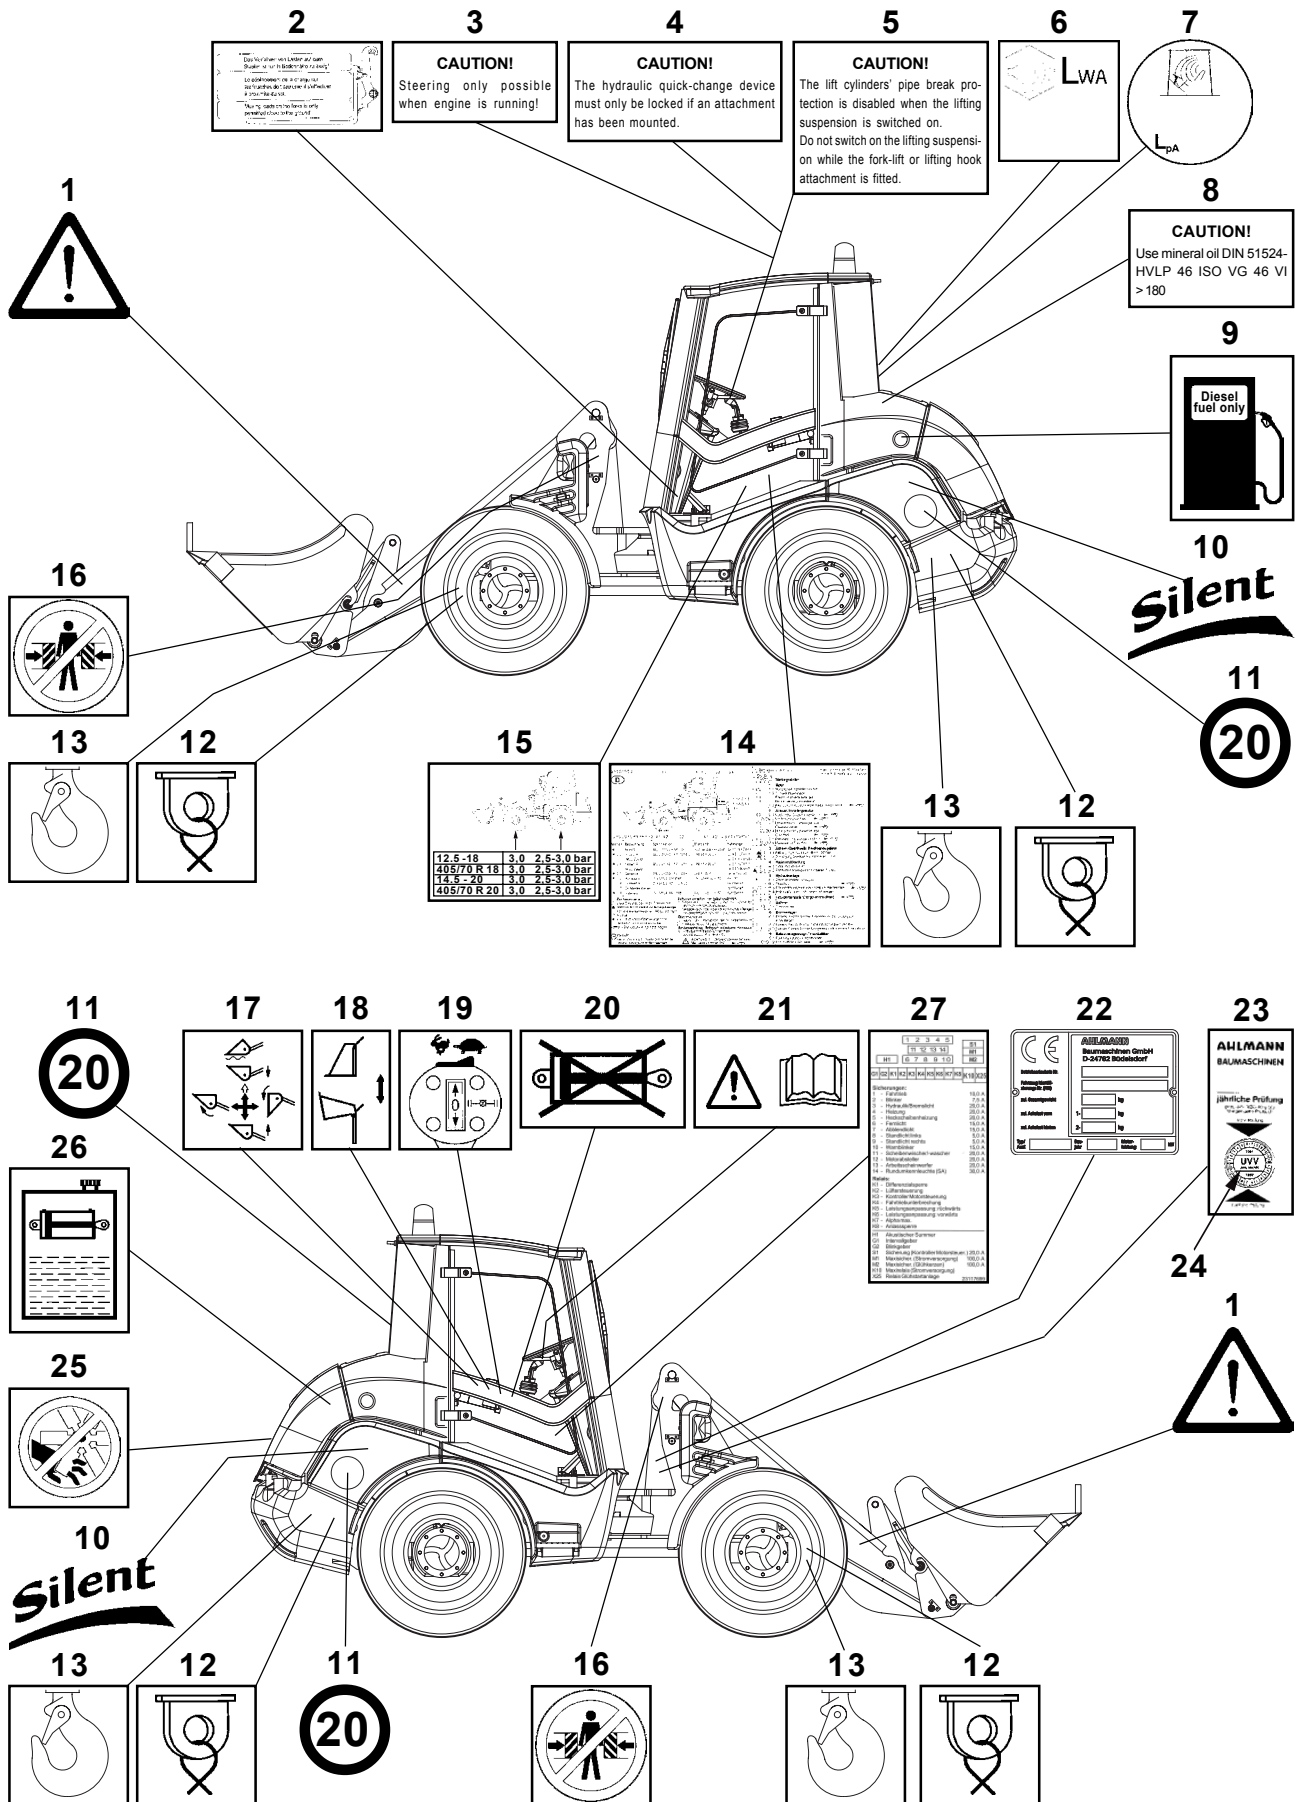

- 1 Symbol: Stay out of the danger zone
- 2 Sign: Moving loads on the forks is only permitted close to the ground!
- 3 Sign: **CAUTION!** - Steering only possible when engine is running!
- 4 Sign: **CAUTION!**
The hydraulic quick-change device must only be locked if an attachment has been mounted.
- 5 Sign: **» Only for loaders with pipe break protection «**
CAUTION!
The lift cylinders' pipe break protection is disabled when the lifting suspension is switched on.
Do not switch on the lifting suspension while the fork-lift or lifting hook attachment is fitted.
- 6 Sign: Noise pressure level (chapt. 11.1.16, 11.2.16, 11.3.16)
- 7 Sign: Sound power level (chapt. 11.1.16, 11.2.16, 11.3.16)
- 8 Sign: Use mineral oil DIN 51524-HVLP 46 ISO VG 46 VI > 180
- 9 Symbol: Fuel tank
- 10 Sign: Lettering "Low-noise construction machine"
- 11 Sign: Maximum speed
- 12 Symbol: Lashing eye
- 13 Symbol: Lifting hook
- 14 Sign: Maintenance schedule
- 15 Sign: Tyre pressure
- 16 Symbol: Stay out of the unprotected articulation area
- 17 Symbol: Pilot valve for working hydraulics (4-8/4)
 - Hand lever forward - Lower bucket arm
 - Hand lever forward beyond its pressure point - Floating position
 - Hand lever to the rear - Lift bucket arm
 - Hand lever to the left - Tilt up quick-change device/attachment
 - Hand lever to the right - Tilt down quick-change device/attachment
- 18 Symbol: Pilot valve for auxiliary hydraulics (4-8/5)
- 19 Symbol: Standard joystick
 - Drive switch (4-10/11)
 - Drive direction - forward
 - 0
 - reverse
 - Pushbutton for differential lock (4-10/10)
 - Hydraulic drive stages (4-10/9)
 - Haresymbol - fast
 - Snailsymbol - slow
- 20 Symbol: Working and auxiliary hydraulics locked
- 21 Symbol: Read and observe the operating instructions before commissioning.
Make sure that all other users have read the safety instructions!
- 22 Machine type label (includes the identification number of the vehicle)
- 23 Sign: Annual inspection as per UVV
- 24 Sign: UVV badge
- 25 Symbol: Open only when the engine is not running
- 26 Symbol: Hydraulic oil tank
- 27 Sign: Fuses/relays