

## 2. Driving on Public Roads

It is recommended that all users follow these rules which correspond to the regulations in Germany. The user must also acquaint himself and comply with any local regulations that happen to be in force.

1. The lift arm support pins should be taken out of their holders (illustration 6/1), inserted in the bracket (illustration 6/2) and secured (spring).
2. Lower the lift arms onto the support pins, tilt back the bucket & engage locking device (illustration 8/22) to secure the control lever in the cabin.

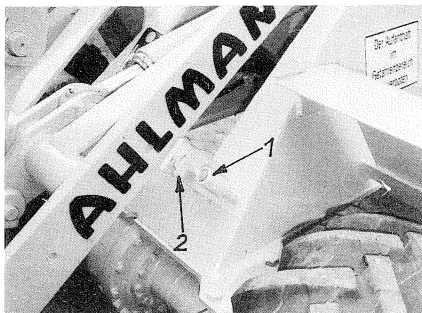


Illustration 6

3. The bucket edge/teeth must be covered by a protector. There is a socket on the right-hand side of the cabin which can be used to connect bucket-edge-mounted direction flashers, should these be required.
4. Driving on public roads with the backhoe :

- a) Fold the backhoe and place in transport position (Illustration 7). The folded backhoe must extend beyond the width of the machine equally to each side.
- b) Use cotter bolts to connect boom to frame (Illustration 7/1) and secure (springpin).
- c) Wrap chain around bucket linkage and boom. Fasten the chain behind the boom and tighten (Illustration 7/2).
- d) Attach rear collision protector (Illustration 7/3) and secure with springpins. Connect rear lights via the socket (Illustration 7/4).
- e) The wheel chock must be carried with the machine.



Illustration 7